



Industrial Telephones

SCT-H Series


Installation & Operation

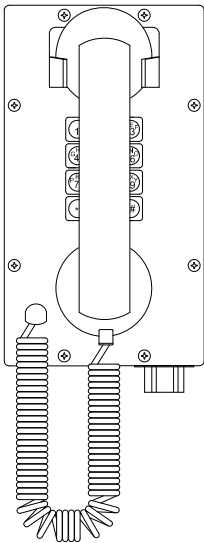


SCT-10-H

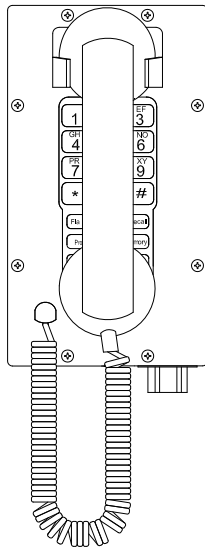

SCT-20-H

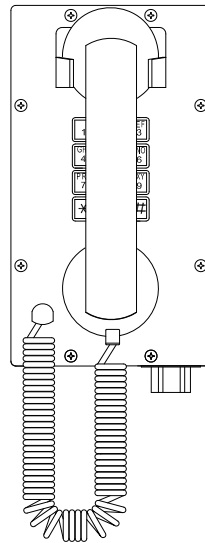

SCT-30-H

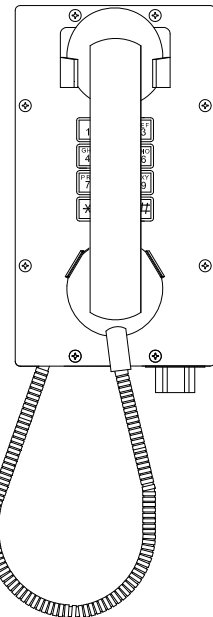

SCT-40-H

Table of Contents

Package Contents.....	2
Overview	3
Standard Features on All Models.....	3
Features (Specific Models)	4
Options Available	4
Accessories.....	4
Installing the SCT-H.....	8
Field Repairs.....	9
Cleaning Tips for Guardian Telephones	9
Operation – Models with Standard Keypad.....	10
Programming the SCT-20-H with Multi-Function Keypad	10
Operating the SCT-H	10
Engineering Specifications.....	11
Replacement Parts.....	12
Government Certification	13
Warranty.....	14
Disclaimer	14
Warning.....	14
Service Telephone Number	14
Feedback	14
Guardian Product Return	15

Table of Figures

Figure 1 - Features.....	5
Figure 2 - Dimensions (Typical)	6
Figure 3 - Installation SCT-10-H & SCT-30-H.....	6
Figure 4 - Installation SCT-20-H	7
Figure 5 - Installation SCT-40-H	7

Package Contents

- (1) SCT-H Telephone
- (1) Installation & Operation Manual

Overview

SCT-H Series Industrial Telephones

SCT-H telephones are designed to provide safe, reliable communication in hazardous areas that are prone to high humidity, chemical vapors, dust and physical abuse. Several variations and options are available to suit the end user's requirements.

Standard Features on All Models

Enclosure

- 16 Gauge steel, zinc dichromate plated and powder coated

Encapsulated Circuitry

- circuit boards are resistant to corrosive agents (e.g. H₂S, SO₂ and NH₃), and environments with high humidity

Surge Arrestor

- protects the user in the event of a high voltage spike on the telephone line

Fuse

- prevents damage to the electronic circuits in the event of a high voltage spike on the telephone line

Magnetic Reed Hook Switch

- no moving parts

Tone (DTMF) Operation

- factory set to tone (DTMF) dialing
- pulse dialing can be ordered or configured in the field

6' Heavy Duty Handset Cord (SCT-10/20/30-H)

- withstands severe use

Armored Handset Cord (SCT-40-H)

- vandal resistant

Hearing-Aid Compatible (HAC)

- compatible with inductively coupled hearing-aid devices

Receiver Volume Control

- Switches in handsets, (on keypad of SCT-20-H), provide 13.5dB of range.

Features (Specific Models)

P6959 SCT-10-H

- Waterproof 3 x 4 Keypad

P6273 SCT-20-H

- Membrane Keypad With Features
 1. weather tight
 2. 10 number memory
 3. Redial - last number (31 digits)
 4. Recall - obtains dial tone without hanging up handset
 5. Flash - 600ms timed loop break
 6. Pause - 3 second pause in programming
 7. Mute - disables handset microphone
 8. Softer/Louder – 2.7dB steps (+8.1dB/-5.4dB 3 steps up, 2 steps down)

P6264 SCT-30-H

- Metal 3 x 4 Keypad


P6965 SCT-40-H

- Metal 3 x 4 Keypad
- 22" Armored Handset Cord
- Handset Retainer Clips


Options Available		
20' Heavy Duty Curly Cord	(20C)	SCT-20-H Only
20' Heavy Duty Curly Cord	(20VC)	SCT-10/30-H Only
Noise Canceling Microphone	(NC)	
36" Armored Cord	36AVC	SCR-40-H only
42" Armored Cord	42AVC	SCR-40-H only
72" Armored Cord	72AVC	SCR-40-H only

Accessories


- P7224 Potted ring detect relay
- P7226 Hazardous Area ring detect relay
- P7227 Potted off-hook detect relay
- P7233 Hazardous Area 48V off-hook detect relay
- PXXXX External Loud Ringer

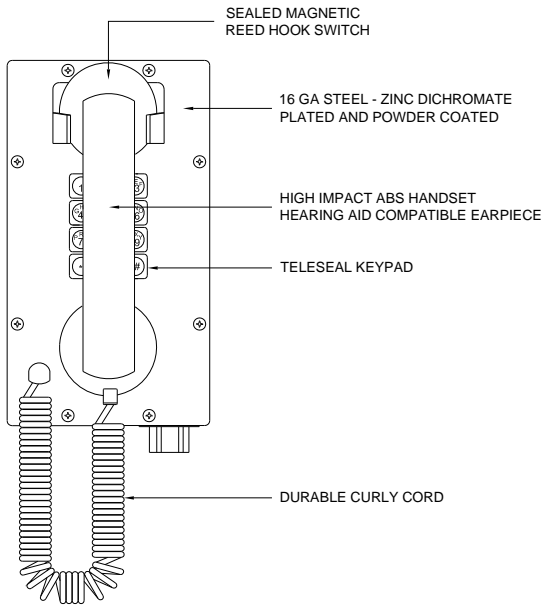


SCT-10-H

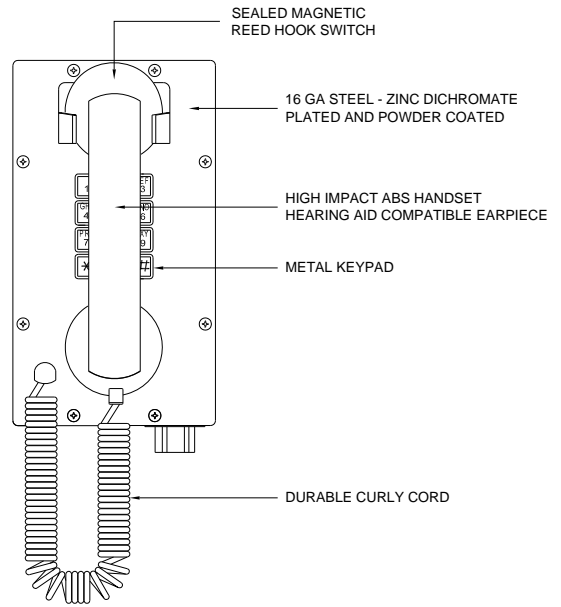

SCT-30-H

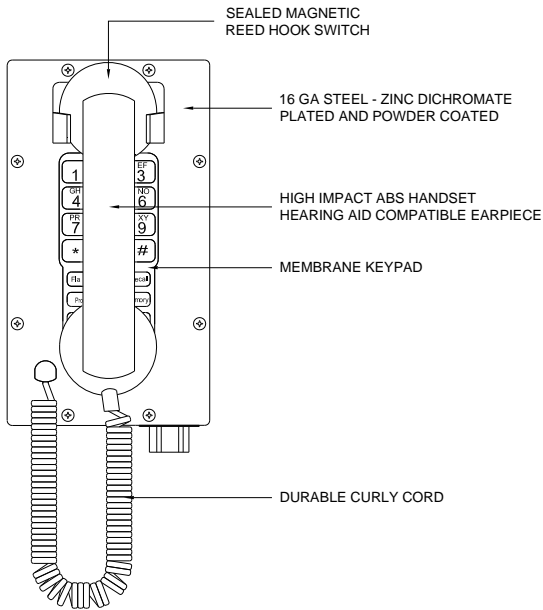

SCT-20-H

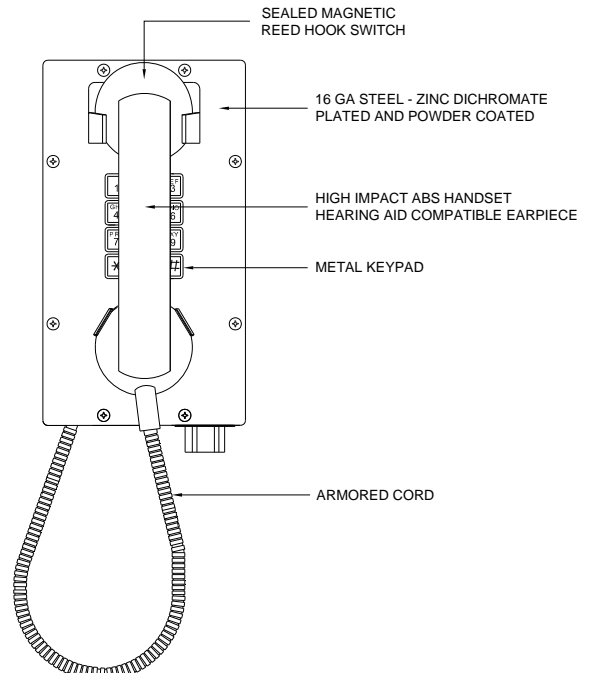

SCT-40-H

Figure 1 - Features

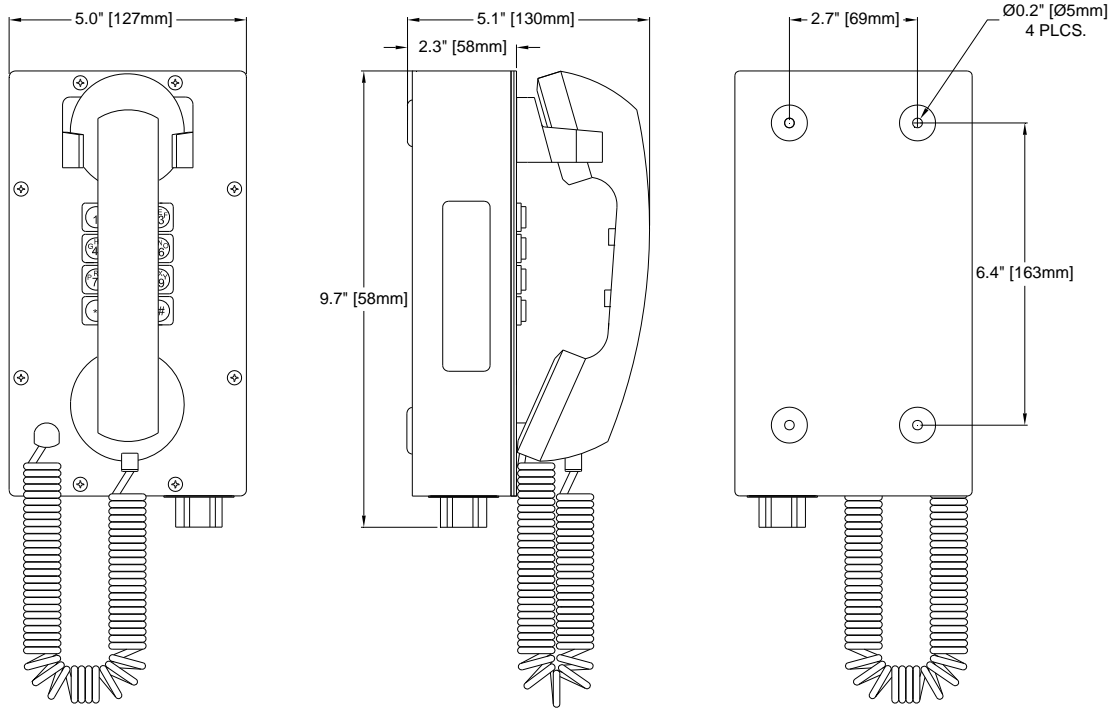


Figure 2 - Dimensions (Typical)

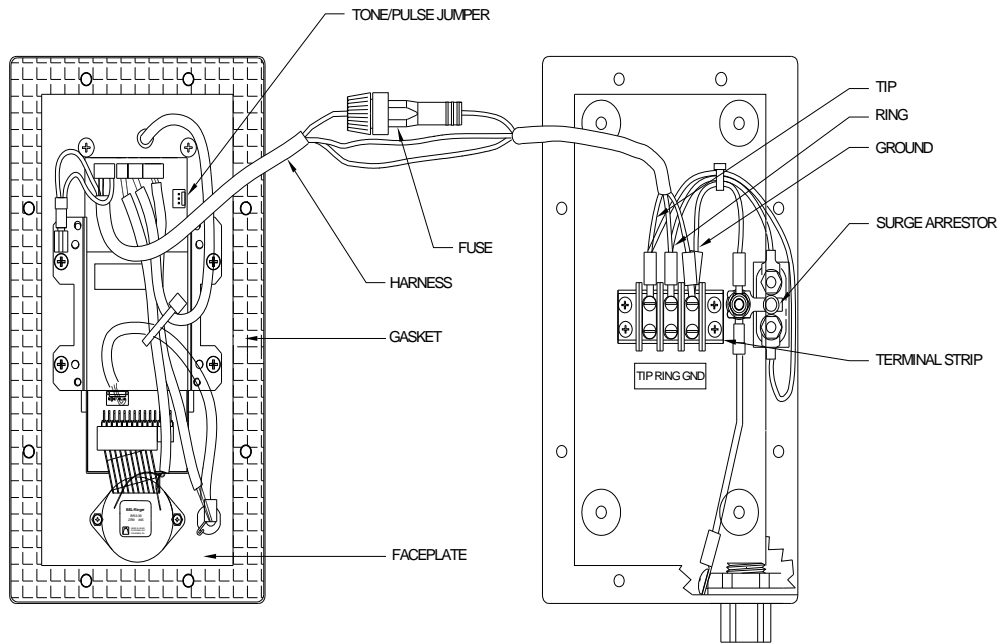


Figure 3 - Installation SCT-10-H & SCT-30-H

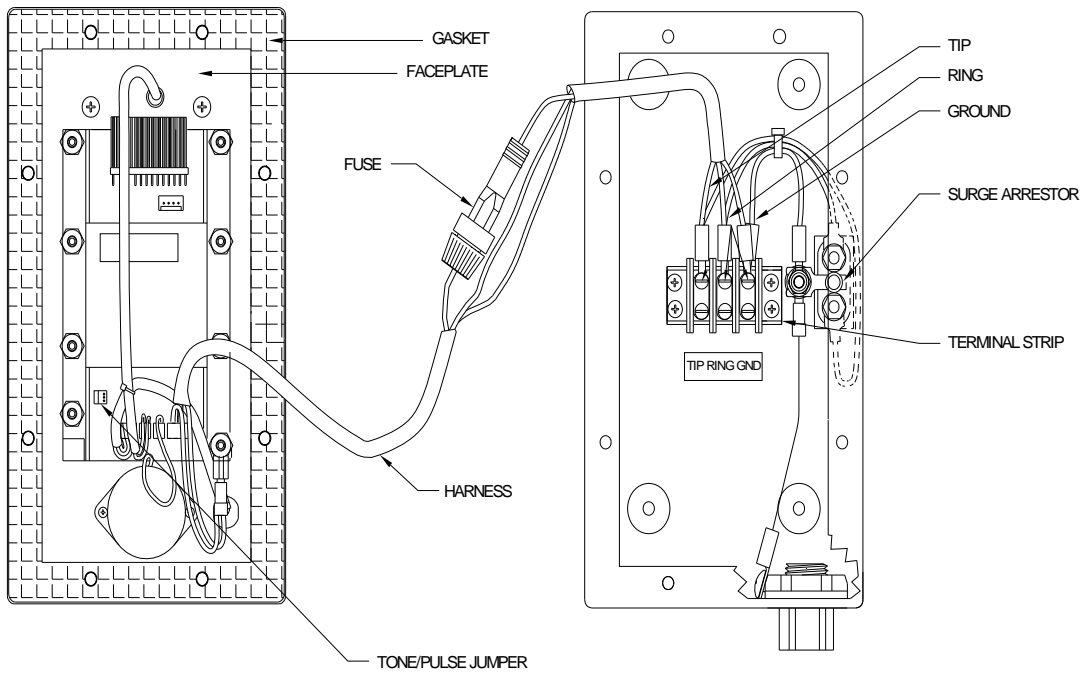


Figure 4 - Installation SCT-20-H

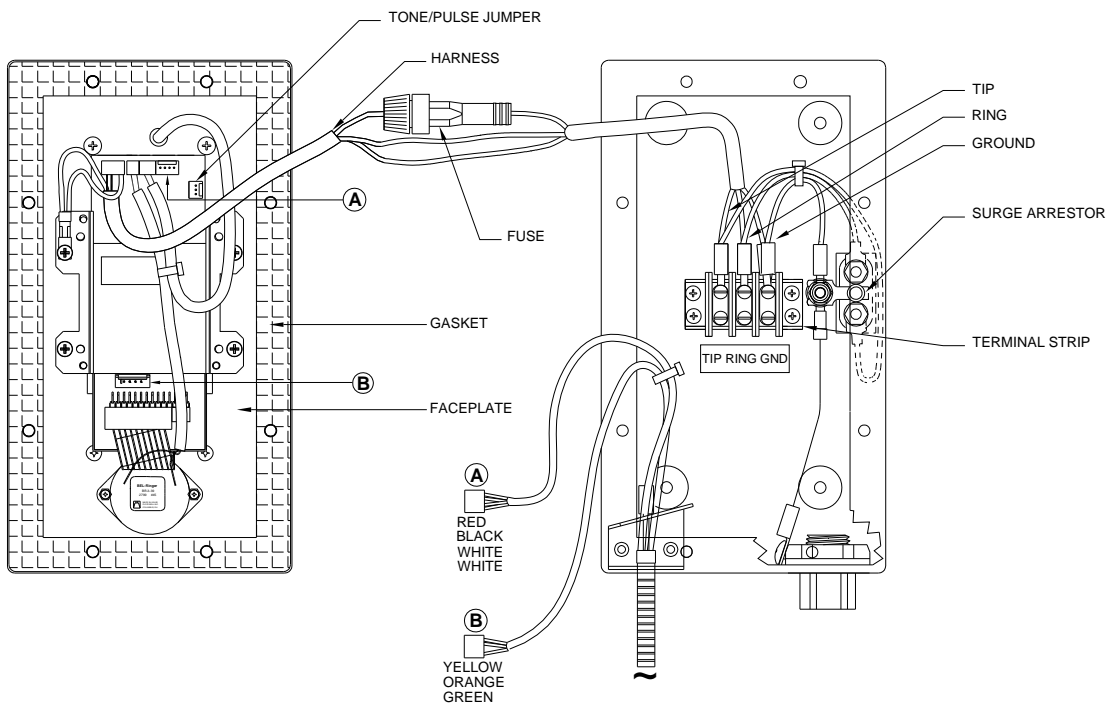


Figure 5 - Installation SCT-40-H

Installing the SCT-H

- Follow all appropriate electrical codes and use only approved electrical fittings for the installation.
- Choose a wall location that is free of obstructions and permits space for cable or conduit runs.
- Ensure mounting can support 4lbs (1.8kg) and any additional foreseeable load.
- To avoid the possibility of creating sparks in a hazardous atmosphere disconnect the wiring at the demarcation block or ensure that the area is non-hazardous before proceeding.
- To avoid shock hazard ensure that none of the electrical connection circuits are live by disconnecting the Tip and Ring conductors at the demarcation block.
- Remove the eight (8) cover screws from the front of the unit and carefully remove the front cover assembly. NOTE that the handset and all electronics are attached to the front plate. The front cover may be separated from the back box by disconnecting the harness plugs.

To change the Tone/Pulse setting to pulse, if required:

- Move the jumper from pins 1 & 2 of the Tone/Pulse connector to pins 2 & 3.
- To change the setting back to tone move the jumper back to pins 1 & 2.
- Use the template provided to locate and drill holes for #8 or M4 mounting screws.
- Attach the back box to the wall. If weather resistance is important in your application select washers that will assist in sealing the mounting holes.

Wiring the SCT-H to the Telephone System

- Use the conduit hub provided or fit an appropriate cable gland, grommet or conduit connector to the 7/8" opening in the bottom of the enclosure.
- Bring cable into the enclosure through the opening and attach individual wires from the exchange (Tip/Ring/Ground) to the connector (Tip & Ring are not polarity sensitive). If a conduit hub is used, ensure it is grounded to the ground stud.
- Ensure all connections are tight, then replace and secure the cover.
- Connect the telephone into the system.
- Test the unit by calling to and from another unit on the exchange.

See: Figure 2 -
Dimensions

Tip: The SCT-H is
factory preset for DTMF
tone.

See: Figure 3 -
Installation SCT-10-H &
SCT-30-H & Figure 4 -
Installation SCT-20-H

Tip: Use #8 or M4
screws to secure the unit
to the wall.

See: Figure 3 -
Installation SCT-10-H &
SCT-30-H & Figure 4 -
Installation SCT-20-H

Field Repairs

Field repairs may only be carried out by qualified technicians using OEM parts. Substitution of parts voids warranty and may pose a hazard to users of the equipment.

- Disconnect the telephone from Tip and Ring power supplied by the PABX or central office before attempting to make repairs.
- Carefully remove the front cover assembly and separate from the housing by disconnecting the harness plugs. NOTE that the handset and all electronics are attached to the front plate.
- Perform the necessary repairs or adjustments.
- Carefully replace the front plate and install all eight screws. Do not over tighten the cover screws; there is a flexible gasket between the cover and the body. Excessive tightening of the screws deforms the gasket and reduces the weather resistance of the set.

Fuse Replacement

- Remove the old fuse by pushing in the end cap of the fuse holder and turning counterclockwise to open. Insert a new 0.25 amp, 250Volt, 3AG fast blow fuse and close the fuse holder.

WARNING!

- Replace only with a 0.25 amp 250V 3AG fast blow fuse. Failure to do so will void the warranty.
- If, on reconnecting power, the fuse fails, check the telephone system wiring. The fuse protects the Tip and Ring line from the telephone system. It is usually powered at 48 volts DC and must not be connected to 120 volts AC.

Changing the Tone/Pulse Setting

- Set the Tone/Pulse jumper for the desired operation. For pulse, set the jumper between the center pin and the "P", for tone set it between the center pin and "T".

See: Replacement Parts

*See: Figure 3 -
Installation SCT-10-H &
SCT-30-H & Figure 4 -
Installation SCT-20-H*

*See: Figure 3 -
Installation SCT-10-H &
SCT-30-H & Figure 4 -
Installation SCT-20-H*

Cleaning Tips for Guardian Telephones

Guardian Telephones may occasionally need to be cleaned to maintain appearance. Generally, wiping the surface with a clean, water dampened cloth will remove most films or residues. If the soiling is too stubborn for plain water, a mild detergent solution may be used. Be sure to wipe away any detergent residue with a plain water dampened cloth. The Telephone may be cleaned with any general-purpose household glass and surface type cleaner. Do not spray the telephone directly! Spray the cleaner on a soft cloth then wipe the surface. Pre-treated cloths, like those used for eyeglasses or cameras, may be used to clean the Telephone. Premoistened towelettes may also be used, however, avoid those containing lanolin or aloe as they will leave a slippery residue. The handset and surface of the telephone may be cleaned with disinfectants used for general cleaning in a medical environment. Isopropyl alcohol may be used applied with a cloth. Avoid using alcohol on silicon based keypads, since doing so may significantly degrade legibility.

- Do not use furniture polishes, waxes or plasticizer-based cleaner (Armor All etc.)
- Do not use lanolin, aloe, glycerin or other skin care type products.
- Do not apply any solvent such as acetone, mineral spirits etc.
- Do not directly spray or immerse the handset.

Operation – Models with Standard Keypad

- Once the standard Model SCT-H Telephone has been properly installed and energized operation is identical to most other single line telephones.

Programming the SCT-20-H with Multi-Function Keypad

A direct memory access register can be assigned to each of the 10 number keys.

Each direct memory access register can contain up to 20 characters.

- Lift the telephone handset off the hook.
- Press **Program** to put the phone into programming mode.
- Press **Memory**.
- Press a number key **0-9**.
- Enter the telephone number you want to store (e.g., 1-800-363-8010).
 - N.B. valid entries are **0-9**, *****, **#**, and **Pause**
- If your phone requires you to dial 9 (or other digit) to access an outside line, press the **9** key, then the **Pause** key, then enter the telephone number you want to store (e.g., 1-800-363-8010).
- Press **Program** again to leave programming mode and return to normal telephone operation.

Tip: Valid characters are 0-9, *, # and Pause.

Tip: The number selected is assigned to the access register.

Tip: You can store up to 10 numbers in memory.

Operating the SCT-H**Manual Operation:**

- Lift the handset and dial manually.
- Hang up the handset at the end of conversation.

Automatic Memory Dialing: For Model SCT-20-H with Optional Multi-function Keypad

- Lift the handset.
- Press **Memory**.
- Press a number key **0-9**.
- The number stored in the register will automatically dial.

Tip: Valid keys for manual dialing are 0-9, * and #.

Tip: Program the SCT-H to use this quick dialing method.

Engineering Specifications	
<i>Electrical Performance</i>	
AUDIBLE RANGE FREQUENCY RESPONSE	300 – 3400 Hz
DIALING METHOD	DTMF OR 40/60 PULSE AT 10 PPS
TRANSMIT OBJECTIVE LOUDNESS RATING (TOLR)	-38 +/- 3 dB
RECEIVER VOLUME ADJUSTMENT	+8.1 / -5.4 dB IN 5 STEPS OF 2.7 dB
RECEIVE OBJECTIVE LOUDNESS RATING (ROLR)	
-AT NOMINAL VOLUME LEVEL	50 +/- 3 dB
-AT MAXIMUM VOLUME LEVEL	41.9 +/- 3 dB
-AT MINIMUM VOLUME LEVEL	55.4 +/- 3 dB
SIDE TONE OBJECTIVE LOUDNESS RATING (SOLR)	
-AT NOMINAL VOLUME LEVEL	11 +/- 4 dB
-AT MAXIMUM VOLUME LEVEL	7 +/- 4 dB
-AT MINIMUM VOLUME LEVEL	14 +/- 4 dB
MEMORY DIAL (SCT-20-H ONLY)	10 REGISTERS OF 20 DIGITS EACH
FLASH (")	600 MSEC TIMED DISCONNECT
MUTE (")	PRESS KEY TO MUTE TRANSMITTER
REDIAL (")	31 DIGITS MAXIMUM
RINGER OUTPUT	>85 dB
FCC RINGER EQUIVALENCE	0.8B
SET IMPEDANCE	600 OHMS NOMINAL
MAXIMUM LOOP	15,000 FT (4,600 M) OF 22 AWG COPPER
<i>Electrical</i>	
RINGER SENSITIVITY	40 – 100 V, 16 – 25 Hz
LINE VOLTAGE	24 – 56 VDC
LOOP CURRENT	20 - 120 mA
CONNECTION METHOD	SURGE ARRESTOR / TERMINAL BLOCK
FUSE	¼ AMP 250 VOLT 3AG FAST BLOW
<i>Environmental</i>	
WEATHERPROOF	ENCLOSURE NEMA 3R
TEMPERATURE	-40° TO +60° C (-40° TO +140° F)
HUMIDITY	0 TO 95% RH
DUSTPROOF	FULLY CASKETED ENCLOSURE

Mechanical	
HOOK SWITCH (CRADLE SWITCH) LIFE	>1 000 000 OPERATIONS
BODY CONSTRUCTION	16 GA STEEL, ZINC DICHROMATE PLATED & POWDER COATED
OVERALL DIMENSIONS (H X W X D)	9.0 X 5.0 X 5.0 INCHES (229 X 127 X 127 MM)
NET WEIGHT	4 LBS (1.8 KG)
HANDSET MATERIAL	HIGH IMPACT ABS
MICROPHONE	NOISE REDUCING ELECTRET
OPTIONAL MICROPHONE	NOISE CANCELING DYNAMIC
RECEIVER	HEARING AID COMPATIBLE
STANDARD MOUNTING	VERTICAL WALL
WIRING ACCESS	SHIPPED WITH 1/2" CONDUIT HUB (7/8" DIAMETER OPENING FOR OWNER SUPPLIED FITTING)
HARDWARE MATERIAL	STAINLESS STEEL
Compliance	
INDUSTRY CANADA	1012 6721 A
FCC	HQHCAN-22517-TE-E
CSA C/US	CLASS I, DIV. 2, GROUPS A, B, C, D

Replacement Parts

Part No.	Description
P002837	Faceplate SCT-10-H & SCT-30-H
P003037	Faceplate SCT-20-H
P005543	Faceplate SCT-40-H
P005479	Handset Shell Only C/W 22" Armored Cord
P005477	Handset Shell Only C/W 6' Curly Cord
P002786	Handset Cradle
P004371	Handset Retainer – SCT-40-H Only
P000028	Microphone Cartridge – Noise Reducing
P004538	Microphone Cartridge – Noise Canceling
P002080	Receiver Cartridge
P005391	Handset Assembly C/W 6' Curly Cord For SCT-10-H & SCT-30-H
P002657	Handset Assembly C/W 6' Curly Cord For SCT-20-H
P005699	Handset Assembly C/W 22" Armored Cord For SCT-40-H
P005582	Telephone Circuit Board
P005786	Keypad Assembly C/W Ribbon Cable For SCT-10-H
P006295	Keypad Assembly C/W Ribbon Cable For SCT-30-H & SCT-40-H
P005224	Keypad Assembly C/W Ribbon Cable For SCT-20-H
P002782	Ringer – Floyd Bell BR-3-39
P005917	Reed Switch
P002992	Surge Arrestor – TII 126L1
P002991	Fuse – Glass 0.25 Amp 250V
P004150	Housing
P002787	Gasket – Faceplate

Government Certification

Attached to the telephone are labels for *Industry Canada* and the *United States Federal Communications Commission*. These identify equipment certifications indicating the 60 and 70 series telephones meet certain telecommunications network protective, operational and safety requirements. These agencies do not guarantee the equipment will operate to the user's satisfaction.

Before installing this telephone equipment, users should ensure it is permissible to connect the equipment to facilities of the local telecommunications company.

Equipment must be installed using acceptable connection methods. In some cases, the telephone users inside wiring, associated with a single line service, may be extended by a certified connector assembly (telephone extension cord). The customer should be aware that in some situations compliance with the above conditions may not prevent degradation of service.

Repairs to certified equipment should only be made by a supplier designated authorized maintenance facility.

For their own protection users should ensure the electrical ground connections of the power utility, telephone lines and internal metallic water pipe systems, if present, are connected. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make ground connections, but should contact the appropriate electrical inspection authority or electrician.

Load Number (LN)

The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop used by the device. Termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Numbers of all the devices does not exceed 100.

Notification to Telephone Company

Upon request, the customer must notify the telephone company of the particular line to which the connection will be made and provide the Industry Canada or FCC registration number. The local telephone company may request disconnection of the telephone where alterations or malfunctions affect the telephone's performance.

United States Federal Communications Commission

This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for Class A computing device pursuant to Subpart J of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference.

Interference

There is no guarantee that interference will not occur in a particular installation. If interference to radio or television reception from this equipment is suspected, proceed as follows:

1. Unplug the set, check for the interference.
2. Re-orient the receiving antenna.
3. Relocate the set with respect to the receiver.
4. Move the set away from the receiver.

If necessary, consult the supplier or an experienced radio/television technician for additional suggestions.

FCC Rules and Ringer Equivalence Number

This equipment complies with Part 68 of the FCC Rules. On the side of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five. To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

Service changes and Limitations

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

This equipment cannot be used on public coin telephone service as provided by your telephone company. Connection to party line service is subject to state tariffs (contact the state public utility commission, public service commission or corporate commission for information.)

Warranty

Guardian Telecom warrants your product to be free of defects in material and workmanship for a period of one year. Guardian Telecom will repair or replace any defective unit that is under warranty free of charge.

This warranty is null and void if any non-authorized modifications have been made to this product, or if it has been subjected to misuse, neglect, or accident. This warranty covers bench repairs only; such repairs must be made at Guardian Telecom or an authorized service depot. Guardian Telecom is not responsible for costs incurred for on-site service calls, freight, or brokerage.

A return authorization must be obtained prior to warranty claims or repairs.

Disclaimer

The products covered by this manual are designed for use in Industrial Environments and/or Hazardous Locations. Due to the range of possible applications for these instruments the manufacturer will not be responsible for damages or losses of any kind suffered as a result of the use of this product, including consequential damages.

Warning

This device may be opened and reassembled by qualified personnel only, for the purposes of installing the product, making adjustments and replacing components, following the instructions in the product manual.

High voltages may be present in this product when connected to telephone wiring.

Service Telephone Number

1-800-363-8010

Guardian Telecom provides a customer service telephone number which is toll-free within North America. If you need assistance when installing or operating this product, please call the toll-free telephone number between regular business hours (8:00AM-5:00PM), Mountain Standard Time. If you are calling outside of regular business hours, please leave a detailed message, and a member of Guardian Telecom's Service Department will return your call as soon as possible. If your product requires service, Guardian personnel will supply you with an RMA (return materials authorization) number over the telephone or through our web site product return page. This number must be included with your return address and the name of the person to contact.

**Guardian Telecom Inc.
Toll-free 1-800-363-8010
Ph. (403) 258-3100
Fax. (403) 253-4967
www.guardiantelecom.com**

Feedback

Guardian Telecom continually strives to make reliable, durable, and easy to use products. If you, as an installer or user of our equipment, have any suggestions for improvements to this or any of our products or documents, including this manual, we would appreciate hearing from you.

Guardian Product Return
<p>Guardian products have been quality tested and are in full working order when shipped from the factory, given the rugged nature of these products shipping is not expected to damage a unit. In the unlikely event of a malfunction, Guardian follows the three step procedure below.</p>
<p><i>Step I - On-Site Correction</i></p>
<ul style="list-style-type: none"> • The most common source of difficulties with a new product is improper installation in one of two ways: incorrect wiring connections or connection to an incorrect power source.
<ul style="list-style-type: none"> • Product wiring needs to be properly connected to the on-site wiring. Correct wiring instructions are shown in the user manual included with the product.
<ul style="list-style-type: none"> • Connecting a telephone to a standard power source, rather than tip & ring, will blow the telephone's internal, user-replaceable fuse. In the event of fuse burn-out, disconnect the telephone from the power source, replace the fuse, and reconnect following the wiring diagrams provided with the product.
<p><i>Step II - Return Materials Authorization (RMA)</i></p>
<ul style="list-style-type: none"> • When a product has been installed following user manual instructions, and the unit fails to operate, the user must contact Guardian Telecom to obtain authorization to return the product. This can be done by completing a RMA form online at www.guardiantelecom.com, or by calling the service telephone number given in this manual.
<ul style="list-style-type: none"> • After providing information on the product, the owner and the nature of the problem, Guardian will issue a RMA number, to be shown on documentation returned with the product.
<ul style="list-style-type: none"> • In addition to the RMA number, shipping documents should include name, address and telephone number of the owner along with contact information for the person responsible for the repair and/or the user who identified the malfunction.
<ul style="list-style-type: none"> • (Where a product is being returned for repair from outside of Canada, customs documentation must show the product's serial number, date of export [date of purchase], and a notation that the equipment is: "Canadian goods returning.")
<p><i>Step III - Factory Authorized Service</i></p>
<ul style="list-style-type: none"> • Once received, each product is carefully inspected and tested. If the product is under warranty, repairs are completed and the product returned to the owner, generally within five working days of receipt by the factory.
<ul style="list-style-type: none"> • A product that has been subjected to misuse, neglect or accident or is beyond the warranty period will be evaluated. The service department will provide the owner's representative with a repair cost estimate. Once approved, repairs are completed and the product returned, generally within five working days.



Guardian Telecom Inc.
Toll-free 1-800-363-8010
Phone (403) 258-3100
Fax. (403) 253-4967
www.guardiantelecom.com
E-mail: sales@guardiantelecom.com
(Click to open message box)

CONNECTED. PROTECTED.

© Guardian Telecom Inc. 2014