


Desktop Telephones DTT-50-Z & DTT-60-Z “ZONE 1”

Installation & Operation Manual

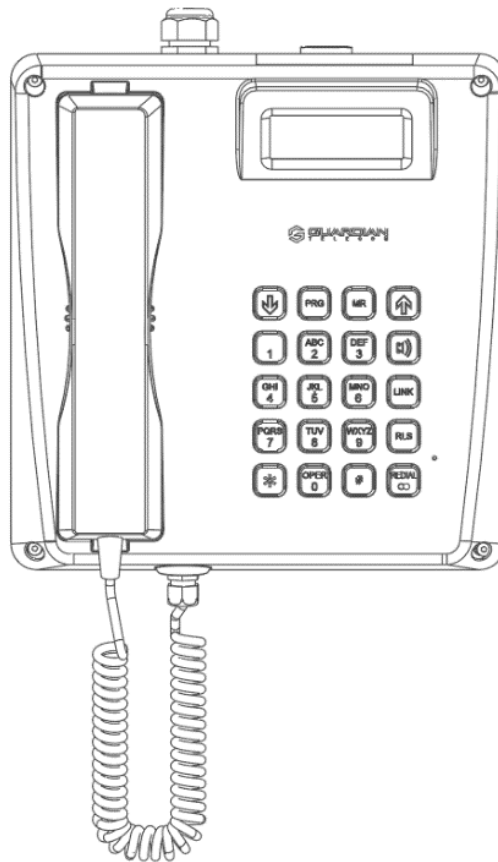

P006812 Rev. L 210511 5/11/2021 10:56 AM

DTT-50/60-Z P006812 Rev. L

COPYRIGHT NOTICE:
© 2021 Circa Enterprises Inc.
ALL RIGHTS RESERVED

This manual and the related materials are the copyrighted property of Circa Enterprises. No part of this manual or related materials may be reproduced or transmitted, in any form or by any means (except for internal use by licensed customers), without prior express written permission of Circa Enterprises. This manual, and the products, software, firmware, and/or hardware described in this manual are the property of Circa Enterprises provided under the terms of an agreement between Circa Enterprises and the recipient of this manual, and their use is subject to that agreement and its terms.

DISCLAIMER: Except as expressly and specifically stated in a written agreement executed by Circa Enterprises Circa Enterprises makes no representation or warranty, express or implied, including any warranty or merchantability or fitness for any purpose, with respect to this manual or the products, software, firmware, and/or hardware described herein. Circa Enterprises assumes no liability for damages or claims resulting from any use of this manual or such products, software, firmware, and/or hardware. Circa Enterprises reserves the right to make changes, without notice, to this manual and to any such product, software, firmware, and/or hardware.

OPEN SOURCE STATEMENT: Certain software components included in Guardian products are subject to the GNU General Public License (GPL) and Lesser GNU General Public License (LGPL) "open source" or "free software" licenses. Some of this Open Source Software may be owned by third parties. Open Source Software is not subject to the terms and conditions of the Circa Enterprises COPYRIGHT NOTICE or software licenses. Your right to copy, modify, and distribute any Open Source Software is determined by the terms of the GPL, LGPL, or third party, according to who licenses that software.

Software or firmware provided by Circa Enterprises that is unrelated to Open Source Software is copyrighted by Circa Enterprises, subject to the terms of Circa Enterprises licenses, and may not be copied, modified, reverse-engineered, or otherwise altered without explicit written permission from Circa Enterprises.

TRADEMARK NOTICE: Guardian Telecom and the Guardian Telecom logos are trademarks of Circa Enterprises, other product names, trademarks, and service marks may be the trademarks or registered trademarks of their respective owners.

Table of Contents

Package Contents.....	3
Models	4
Accessories and Options	4
Overview.....	4
Features.....	4
Installation.....	8
Wiring	9
Alternate Installation Instructions for IEC60945 Maritime Compliance	10
Retrofitting Headset/Strobe Light/Ringer	11
Field Repairs & Adjustments	12
Operating Modes and Software Features.....	14
Specifications.....	21
Performance	21
Electrical	21
Environmental	21
Mechanical.....	21
Compliance	22
Replacement Parts	22
EU Declaration of Conformity.....	23
Warranty	25
Disclaimer	25
Warning	25
Service Telephone Number.....	25
1-800-363-8010	25
Feedback.....	25
Guardian Product Return	26
Step I - On-Site Correction	26
Step II - Return Materials Authorization (RMA).....	26
Step III - Factory Authorized Service	26
Storage	27
Cleaning Tips for Guardian Telephones.....	27

Table of Figures

Figure 1 - Features	6
Figure 2 - Overall Dimensions.....	6
Figure 3 - Wall Installation of Base.....	7
Figure 4 - Wiring	7
Figure 5 - Product Standard Compliance Label.....	7
Figure 6 - IEC60945 Compliance Label (if applicable).....	7
Figure 7 - Ferrite Cores Installation	10
Figure 8 - Replacing the Hook Switch	13

Package Contents

- (1) DTT-Z Hazardous Area Desk Top Telephone
- (1) Parts bag containing two handset clips & screws, one 3mm Allen key for faceplate screws & one Ring Detect Relay Enable jumper wire.

Models

P9051	DTT-50-Z Membrane Keypad with Volume Control and Coil Cord
P9052	DTT-60-Z Membrane Keypad with Volume Control and Armored Cord
P9066	DTT-50-Z C/W PTT Handset

Accessories and Options

P007919	Ferrite core kit for IEC60945 Maritime Compliance
---------	---

Overview

Desk Top Telephones “ZONE 1”

DTT-50-Z and DTT-60-Z referred to as “ZONE 1” Desk Top telephones provide safe, reliable communications in hazardous areas that are prone to high humidity, chemical vapors, dust and physical abuse. Hands Free operation is standard on all models and the telephones can be programmed for speed dialing. All models have the option of installing a 3rd party headset. Any 3rd party headset approval ratings are the responsibility of the customer. A Push-to-Talk handset is available as an option.

Features

Housing and Handset

- high impact thermoset – static dissipative

Mounting

- desk top or wall mounted

Audio Modes

- handset and hands-free or optional headset

Resettable Fuse

- prevents damage to the electronic circuits in the event of a high voltage spike on the telephone line

Magnetic Reed Hook Switch

- no moving parts

LCD Display

- for ease of user interface, multi-language capable

Built In Ring Detect Relay

- 250VAC 5 Ampere Ring Detect Relay, no need for external RDR

Tone (DTMF)/Pulse Operation

- factory set to tone (DTMF) dialing
- 60:40 or 66:33 pulse dialing can be ordered or configured in the field

Handset Cord

- 6' heavy duty Coil cord on DTT-50-Z
- armored cord on DTT-60-Z

Hearing-Aid Compatible (HAC) Receiver

- compatible with inductively coupled hearing-aid devices

Receiver Volume Control

- Switch on keypad provides 15dB of audio range

Wide Temperature Range

- -30° C to +60° C (-22° F to +140° F) Refer to Specifications



GENERAL ALERT
ALERTE GÉNÉRALE

Warning

Electrical Hazard: This product should be installed by a licensed electrician according to all electrical and building codes.

Avertissement

De danger électrique : Ce produit doit être installé par un électricien agréé selon tous les codes électriques et du bâtiment.



GENERAL ALERT
ALERTE GÉNÉRALE

Warning

Dislocation Hazard: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

Avertissement

Risque de dislocation: Pour éviter les blessures, cet appareil doit être solidement fixé au plancher/mur conformément aux instructions d'installation.



GENERAL ALERT
ALERTE GÉNÉRALE

Warning

Hazardous Area: Before opening the enclosure, ensure that the area is safe and/or that the power conductors are not live.

When replacing the faceplate ensure that wires or other foreign objects are not trapped between the edges. Anything that prevents the base and the faceplate from being in direct contact nullifies the hazardous area rating of the telephone.

Avertissement

Zone dangereuse: Avant l'ouverture de l'enceinte, assurez-vous que la zone est sécuritaire et/ou que les conducteurs de courant ne sont pas sous tension.

Lorsque vous remplacez la plaque frontale assurez-vous que les fils ou d'autres objets étrangers ne sont pas coincés entre les bords. Tout ce qui empêche la base et la plaque faciale d'être en contact direct annule la cote de zone dangereuse du téléphone.

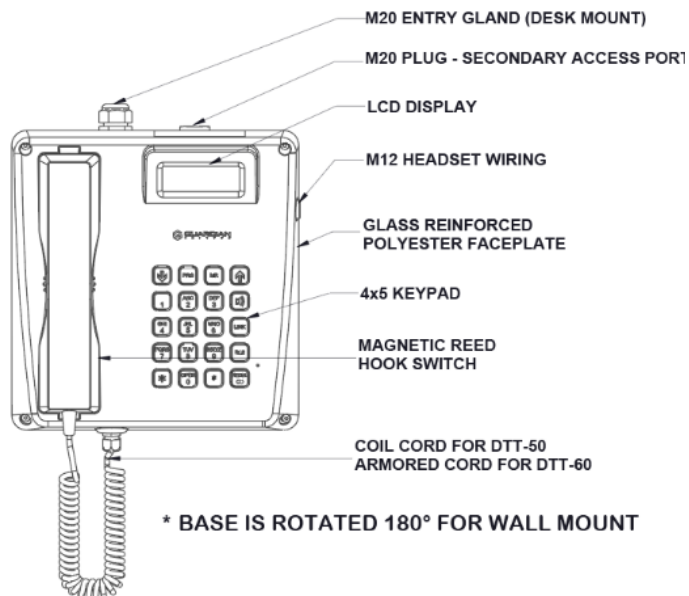


Figure 1 - Features

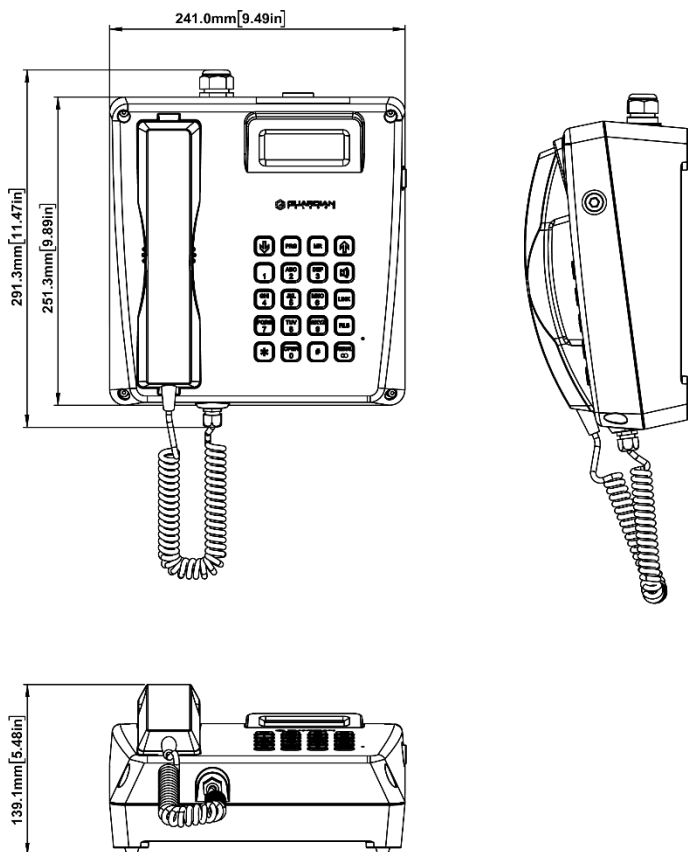


Figure 2 - Overall Dimensions

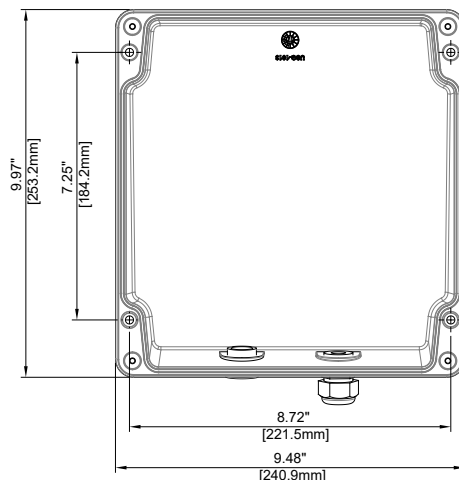


Figure 3 - Wall Installation of Base


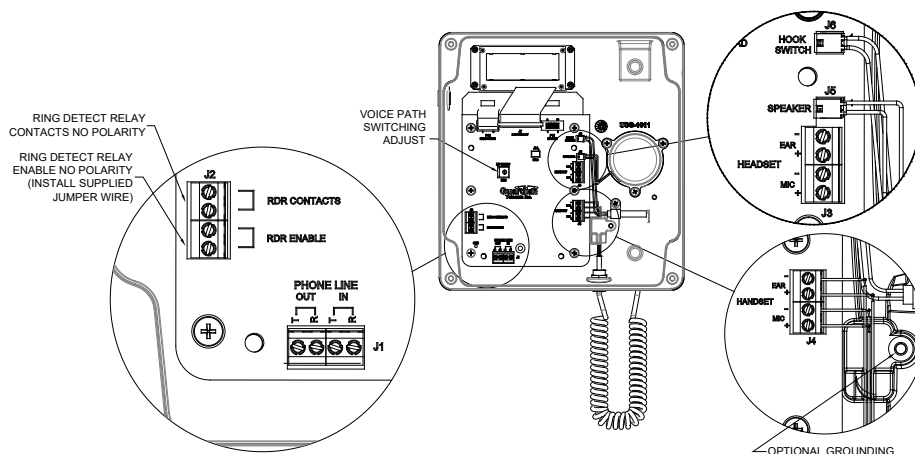


Figure 4 - Wiring

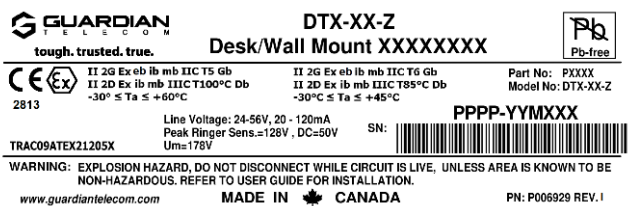

Note: the above heading will be DTT-50-Z for P9051 and DTT-60-Z for P9052.

Figure 5 - Product Standard Compliance Label



Figure 6 - IEC60945 Compliance Label (if applicable)

Installation

- DTT-Z telephones are approved for use in limited hazardous areas. Ensure that this telephone is approved for the area in which it is to be installed.
- DTT-Z telephones are shipped from the factory set for DTMF (Tone) dialing mode. If loop disconnect (Pulse) dialing is required program Register Number 52 appropriately.
- Follow all appropriate electrical codes and use only approved electrical fittings for the installation.
- If required install primary surge protection outside of the classified area.
- Ensure that none of the electrical connection circuits are live, by disconnecting the Tip and Ring conductors at the demarcation block.
- If the built in Ring Detect Relay is to be utilized to activate an external alarm, ensure that the power conductors are not live.
- Using the 3mm Allen Key provided remove the four faceplate screws to detach the faceplate from the base.
- The telephone may be installed on a flat surface or wall mounted.

See: Specifications Compliance

See: Operating Modes and Software Features.

Desk Top Configuration

- If the telephone is to be desktop mounted set the base in the desired location.

Wall Mount Configuration

- If the telephone is to be wall mounted choose a location that is free of obstructions and permits space for wiring. Mount the base with the deepest dimension on the bottom. Mount as follows:
 - The telephone weighs 3.95 kilograms (8.68 pounds), ensure that the mounting can support four times the weight of the unit; that is 15.8 kilograms (34.8 pounds). Wall anchors are not included; follow the manufacturer's instructions when installing anchors.
 - Mounting to concrete or cinder block. Lead expansion anchors with M4 (#8) screws are recommended.
 - Mounting to drywall. Hollow wall anchors (Molly Bolts) with M4 (#8) screws are recommended.
 - Mounting to other surfaces. It is the responsibility of the installer to ensure that the base is attached in such a way as to support the weight specified above.
- Install the handset retainer clips on the faceplate using the hardware supplied.

See: Figure 2 - Overall Dimensions.

Special Conditions for Safe Use (Gas & Dust)

(1) The enclosure must be in a non-hazardous location in order to open to make the necessary connections. The connecting cable must be suitable for use in the EX environment (see IEC60079-14 & IEC61241-14) and be secured using the cable gland provided.

(2) The volt free contacts for the ring detect circuit must only be connected to external equipment suitably rated for its end-use EX environment (see IEC60079-14 & IEC61241-14) and be secured using an approved cable gland.

(3) During installation, it must be ensured that external wiring to connectors J1 and J2 are sheathed to within 10mm of the terminals. External wiring shall be rated for a minimum of 250V and run so that 50mm separation is maintained between wiring and terminals/connectors other than J1 and J2.

Wiring

- **WARNING: Use properly sized cable to ensure a gas/dust tight seal at the cable gland, (M12 – 2 to 5mm), (M20 – 8 to 13mm). Take care not to lose parts of the gland if the cap is removed.**
- Insert the Tip and Ring cable through the M20 gland and connect the conductors to the Phone-Line-In terminal block.
- If an extension telephone is installed the phone line out terminals may be utilized. A four-conductor cable can be used, or an additional cable can be run through the spare 20mm opening if it is not occupied for other purposes.
- Install the headset if provided.
- If an external sounder is utilized, remove the M20 plug, install an appropriate cable gland and connect the wiring to the Ring Detect Relay terminal block. Enable the Ring Detect Relay by inserting the jumper wire provided across the Ring Detect Relay Enable terminals.
- Tighten the cable glands securely.
- Mount the faceplate and secure the captive screws to the base.

Warning:

Ensure that wiring or any other obstruction is not trapped between the faceplate and the enclosure. Anything that prevents the flanges from being in direct contact will negate the hazardous area protection afforded by the design of the telephone.

- Connect the Tip and Ring conductors at the demarcation block.
- If the built in Ring Detect Relay is utilized, apply power to the conductors.

Programming

- If necessary, program the features.

Testing

- Test the unit by calling to and from another unit on the exchange.

Tip: If cable diameter is not in the range of the M12 or M20 glands provided an approved reducer and smaller gland can be fitted.

See: Figure 4 - Wiring

See: Field Repairs & Adjustments

See: Operating Modes and Software Features

Alternate Installation Instructions for IEC60945 Maritime Compliance

IMPORTANT - NOTE TO CUSTOMER:

Due to increased EMC/EMI and Surge protection if it is required that the phone meets the IEC60945 Maritime Standard as well as the Zone 1 Hazardous Area requirements, it is important to follow the instructions below to ensure compliance.

IEC60945 Alternate Installation:

Telephone Line Connection: The telephone line will require the addition of a ferrite Core (Optionally Supplied). Install the ferrite core by first feeding the cable into the phone gland. Install the ferrite core by wrapping the telephone Tip/Ring wires 3X (3 Turns) around the core as shown in the following image. Clamp the core together and attach to the circuit pack using the supplied bonding tape and zip tie. Complete the connections to the phone as per the standard wiring method shown.

Headset Option: If a 3rd party headset is to be installed, then the headset cable will need to have a ferrite core attached (Optionally Supplied). Install the ferrite core by first feeding the cable into the phone gland. Then wrap the headset wires 2X (2 Turns) around the core as shown in the image below. Clamp the core together and attach to the circuit pack using the supplied bonding tape and zip tie. Complete the connections to the phone as per the standard wiring method shown. Any 3rd party headset approval ratings are the responsibility of the customer.

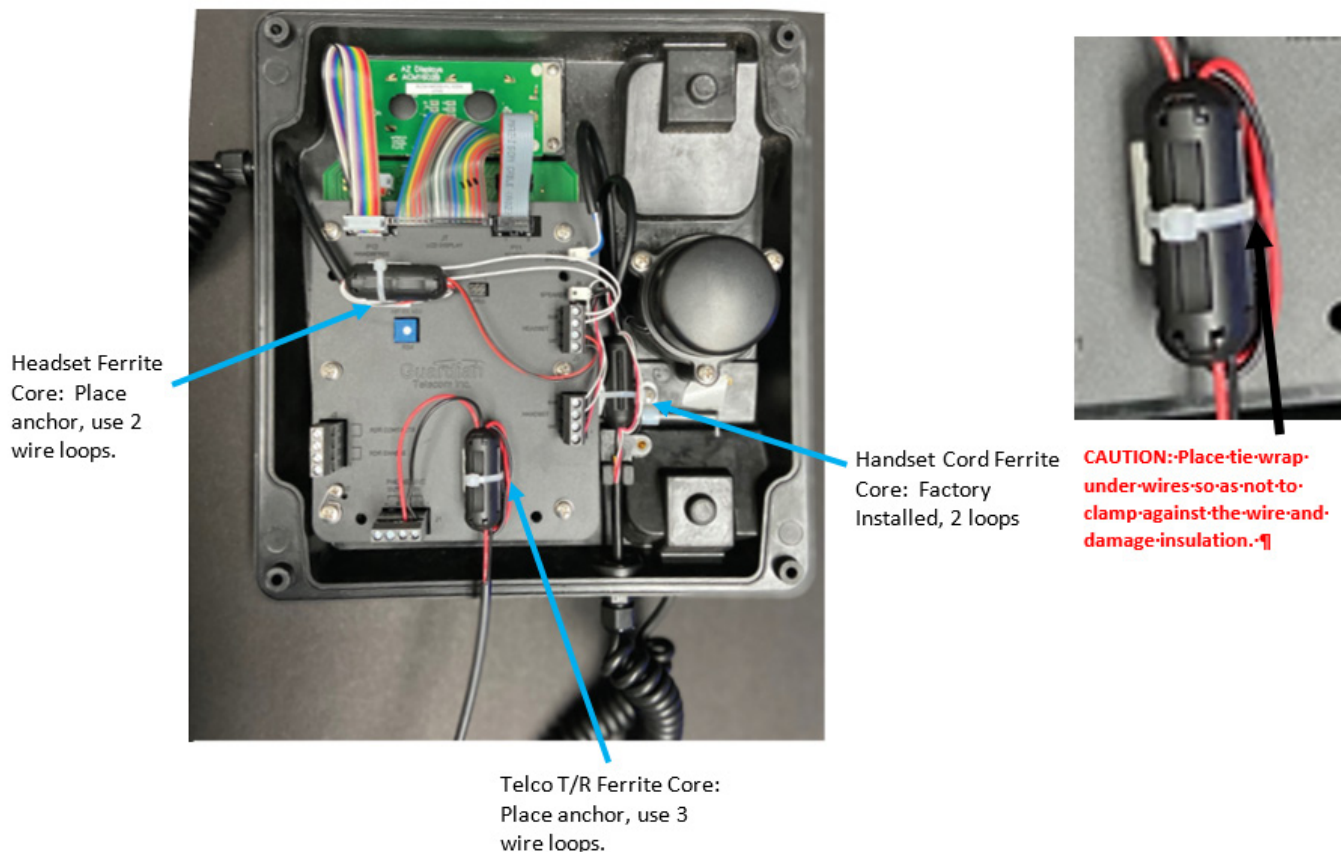


Figure 7 - Ferrite Cores Installation

Retrofitting Headset/Strobe Light/Ringer

- Disconnect telephone wiring at the demarcation block and ring detect relay power at the breaker to avoid shock hazard.
- Loosen the four captive screws in the faceplate and detach the faceplate from the base.
- Install the options following the instructions below.
- Tighten cable glands securely.
- Carefully replace the faceplate and install all four screws.
- Reconnect telephone and ring detect relay wiring.
- Test the unit by calling to and from another unit on the exchange.

Headset

- Remove the M12 plug on the side of the faceplate and install the accessory cord gland.
- Slide the accessory cord through the gland into the faceplate and tighten the gland.
- Connect the headset wiring to the headset earpiece and microphone terminal block.
- If the headset is utilized, program the phone to recognize the headset (Register Number 54).

See: Figure 4 - Wiring

Strobe Light /Loud Ringer

- Remove the alerter device-wiring plug from the base and install an approved M20 cable gland.
- Insert the cable through the gland and connect the Strobe Light or Loud Ringer wiring to the Ring Detect Relay terminal block.
- Enable the Ring Detect Relay by inserting the provided jumper wire across the Ring Detect Relay Enable terminals.

See: Figure 4 - Wiring

Field Repairs & Adjustments

Field repairs may only be carried out by qualified technicians using OEM parts. Substitution of parts voids warranty and may pose a hazard to users of the equipment.

See: Replacement Parts

- Disconnect telephone wiring at the demarcation block and ring detect relay power at the breaker to avoid shock and explosion hazard.
- Loosen the four captive screws in the faceplate and detach the faceplate from the base.
- Perform the necessary repairs or adjustments.
- Carefully replace the front plate and install all four screws.
- Reconnect telephone and ring detect relay wiring.

Hands-free Speaker Phone Voice Switching Adjustment

- Locate the Voice Path Switching potentiometer.
- Adjust the potentiometer clockwise to increase the receive sensitivity.
- Adjust the potentiometer counter-clockwise to increase the transmit sensitivity.

See: Figure 4 - Wiring

Handset Replacement

- Disconnect the handset wiring from the terminal block.
- If the phone is equipped with an armored cord handset, remove the anchor screw from the armored cord lanyard.
- Loosen the handset cable gland and pull out the cord.
- Install the new replacement and tighten the gland.
- Rewire the replacement cord to the terminal block.

See: Figure 4 - Wiring

Headset Replacement

- Disconnect the headset wiring from the terminal block.
- Loosen the cable gland and pull out the cord.
- Install the new replacement and tighten the gland.
- Rewire the replacement cord to the terminal block.

See: Figure 4 - Wiring

Fuses

- ***There are no replaceable fuses in the DTT-Z.***
- The phone line fuse on the circuit board of all models is of the resettable type and is not replaceable. If the fuse trips due to an external event, it will reset in a short period of time. The duration will depend on ambient temperature and other factors. If the fuse trips repeatedly, check the telephone system wiring. The fuse protects the Tip and Ring line from the telephone system. It is usually powered at 48 volts DC and must not be connected to 120VAC or 230VAC.
- The Ring Detect Relay fuse is a 5 Ampere, fast blow fuse. It is potted to prevent an exposed spark. If the fuse blows, the circuit board must be replaced.

Magnetic Reed Hook Switch Replacement

- Unplug the Hook Switch Connector.
- Remove the screw that secures the nylon retainer.
- Replace the hook switch core with new one and re-secure/connect.

**See: Figure 8 -
Replacing the Hook
Switch**

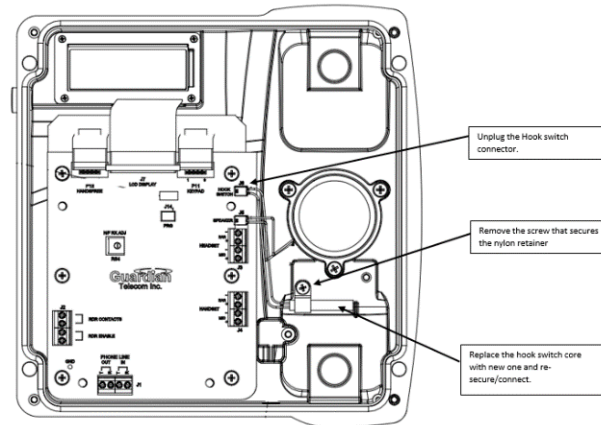


Figure 8 - Replacing the Hook Switch

Key Functions

While Programming

- Hands free mode
- Puts phone in programming mode
- or .. Scrolls through registers
- Returns to main register prompt
- Stores number in selected register
- Returns to main register without changing contents of selected register
- Clears selected register and switches back to main register prompt

While Operating

- Hands free mode or returns to on-hook
- or .. Scrolls through registers in Phone Book mode
- or .. Volume control during conversation
- Timed disconnect (same as Flash) for some CO or PABX functions
- Disconnects from phone line
- Dials number in buffer
- Displays register 0 to 9 for quick dialing
- (twice) .. Displays register 00 to 19 for phone book dialing; can scroll with arrow keys

Operating Modes and Software Features

Programming Mode:

1. To enter Programming Mode, take the phone off hook by removing the handset from the cradle or by pressing the [SPK] key. During the programming process, do not switch Audio modes.
2. Press the [PRG] key for 1 second until a beep tone is heard and the programming prompt is shown on the display. The pass code prompt will be shown on the second line of the LCD.
3. Enter the pass code. It must be four characters long, the numeric keys, the '*' and the '#' are valid keys. The user-entered code will not be displayed on the LCD.

Note: The telephone has provision for two pass codes, either one of which will allow access to Programming Mode. Factory settings are 1234 and 5678.

4. Pass code check:
 - A. If the entered code is incorrect, an invalid message will be shown on the second line for two seconds and the phone will go back to on hook
 - B. If the entered code matches the preset code, the phone will be in programming mode and the main register prompt will be shown:
Enter REG #:
[REG 0-19, 50-69]
5. Register number selection:
 - A: Register Code entered:
Enter a two-digit register number or use the arrow keys to scroll to the desired register. Once the first number is entered, the second key also has to be a number. Other keys entered following the first key (except the arrow keys and [PRG] key) will result in an invalid message being displayed on the LCD for two seconds and two alert beep tones. The LCD will switch back to the main register prompt.
Once the register number is entered, it will be shown on the first line. The previous setting of the register will also be displayed:
REGxx=xxxx
 - B. Scrolling:
The first key can be an arrow key (the [↑], and the [↓] keys). If an arrow key is activated the selected register will be shifted to the adjacent register (the next higher or lower depending on whether the entered key is the [↑] or the [↓] key). The register number will be shown on the first line and the contents of the register will be displayed. The phone is then ready to accept the register setting.
Register scrolling can run from registers 00 to 19 (phone number registers), and from 50 to 69 (feature registers). The arrow keys will shift the register within the range 00 to register 19 but will not jump to registers 50 to 69. To access registers 50 to 69 press [RLS] to get back to the main register prompt, then enter a register within the range of 50 to 69. Then use the arrow keys to scroll through registers 50 to 69.
 - C. Programming phone numbers:
If the selected register is within the range 00 to 19 it is a phone number register that can contain a maximum of twenty digits. The "#" key is counted as one digit and will be treated as a three-second pause. This may be required if an access number i.e. "9" must be entered to get an outside line.
Enter the new phone number to replace the previous setting.
 - a. Use the [MR] key to store the setting to the non-volatile memory. A beep tone will be heard and the store message will be shown on the display for one second. The LCD will then switch back to the main register prompt.
 - b. Use the [RLS] key to cancel the entry leaving the previous phone number unchanged. The display will switch back to the main register prompt.
 - c. Use the [LINK] key to clear the contents of the register and switch back to the main register prompt.

D. Programming Access Codes:

If the selected register is 50 or 69, it is a four-digit Programming Access Code register.

If desired enter a new pass code to replace the previous code. The pass code has to be four characters long. The numeric keys, the '*' and the '#' are valid keys for pass code.

- a. Use the [MR] key to accept the new code. A second prompt will be shown with the newly entered pass code. Check and compare the pass code on the LCD display to the pass code on the programming sheet. Press the [MR] key again to store the new code to the non-volatile memory. A beep tone will be heard and the store message will be shown on LCD for one second. The LCD will switch back to the main register prompt.
- b. Press the [RLS] key to cancel the newly entered pass code leaving the existing pass code unchanged. A "Code not saved!" message will be shown for one second and the display will switch back to the main register prompt.

Note:

For convenience the DTT-Z telephone has two Access Code registers either one of which will allow entry to programming mode. If the Access Codes are to be replaced, they should be changed one at a time. Confirm the new code by using it to get into the programming mode. If the new code does not work, use the other Access Code to restore the code that was previously changed.

Always use the Programming Sheet to record the Access Codes.

If both Access Codes are forgotten, the phone has to be sent back to Guardian Telecom or an authorized service center for the Access Codes to be restored.

E. Configuration Codes:

If the selected register is within the range 51 to 68, it is a one-digit Configuration Code register.

Use the Programming Sheet as a guide to select the settings. Enter the new code to replace the previous setting.

- a. Use the [MR] key to store the setting to the non-volatile memory. A beep tone will be heard and the store message will be shown on the display for one second. The LCD will then switch back to the main register prompt.
- b. Use the [RLS] key to cancel the entry leaving the previous Configuration Code unchanged. The display will switch back to the main register prompt.

F. Default Settings:

When register 51 is set at '2' all the configuration codes and the Pass Codes will remain unchanged while the phone is still in the Programming Mode. Once the phone goes from on hook to off hook again all the Configuration codes and the Pass Codes will be reset to the default settings and register 51 will be reset to '1'. The phone number registers will remain unchanged.

G. Exiting Programming Mode:

Press and hold the [PROG] key to exit programming mode. The exit-programming message will be shown and the phone will go back to on hook.

Programming Sheet:

Register number	Function	Descriptions	Entered Codes	Parameters	Remarks
00	Speed dial phone numbers	Phone number at 0		Maximum 20-digit phone number	Registers 00 to 09 can be accessed for dialing by pressing MR once followed by a number 0 to 9. Registers 00 to 19 can be accessed for dialing by pressing MR twice and entering a number 00 to 19. In addition, the up/down arrows can be used to scroll through the registers. When the desired number is located, pressing MR will cause the number to be dialed.
01		" " " 1			
02		" " " 2			
03		" " " 3			
04		" " " 4			
05		" " " 5			
06		" " " 6			
07		" " " 7			
08		" " " 8			
09		" " " 9			
10		" " " 10			
11		" " " 11			
12		" " " 12			
13		" " " 13			
14		" " " 14			
15		" " " 15			
16		" " " 16			
17		" " " 17			
18		" " " 18			
19		" " " 19			
20 - 49		Not Used			
50		First Access Code (numeric keys, *, and #)		4 characters	Default = 1234
51	Default Settings	1 = user, 2 = default Factory defaults: 50 = 1234 (Access code) 51 = default settings 52 = DTMF dialing 53 = English Display 54 = Speaker Mode 55 = Flash 56 = 5, Headset Mic gain 57 = 3, Handset Mic gain 60 = 60 minutes Talk Time 61 = 32 dialing digits 62 = 5 hand/headset volume 63 = 5 speaker volume 64 = 1 65 = 2 66 = 6 67 = 5 TX gain 68 = 6 Rx gain 69 = 5678 (Access code)		1 digit code	When register 51 is set at '2', all the configuration codes and the Pass Codes will remain unchanged while the phone is still in the Programming Mode. Once the phone goes from on hook to off hook again, all the configuration codes, and the Pass Codes will be reset to the default settings and register 51 will be reset to '1'. Phone number registers will not be changed. Default = 1
52		Dialing Modes 1 = DTMF (RS 470) 2 = DP 60:40 (10pps) 3 = DP 66:33 (10pps) 4 = DTMF (BTR 21)		1 digit code	Default North America = 1 Europe = 4

53		LCD Display Languages 1 = English 2 = French 3 = Spanish		1 digit code	Default = 1
54		Hands-free Devices 1 = speaker, 2 = headset		1 digit code	Default = 1
55		Timed Break (Flash) 1 = 280ms, 2 = 600ms		1 digit code	Default Europe = 1 North America = 2
56		Headset Microphone Gain (1-8)		1 digit code	Default = 3
57		Handset Microphone Gain (1-8)		1 digit code	Default = 3
58 -59		Not used			
60		Talk time (minutes) 1 – 9 = 1 to 9 minutes 0 = 60 minutes		1 digit code	Default = 0
61		Max. digits in manual dialing 1-9 = 3+(1 to 9) digits, 0 = 32 digits		1 digit code	Default = 0
62		Handset / headset volume after reset (1 – 8) 2 dB / step		1 digit code	Default = 5
63		Speaker volume after reset (1 – 8) 2 dB / step		1 digit code	Default = 5
64		Voice switch speed between transmit & receive (1 – 4) 1= max speed 4= min speed		1 digit code Using the factory setting recommended	Default = 1
65		Background noise offset level (1 – 4) 1=120mV, 2=180mV 3=240mV, 4=300mV		1 digit code Using the factory setting recommended	Default = 2
66		Background noise & soft clips (1 – 8) 1 = Tx soft clip 2 = Rx soft clip 3 = Tx, Rx s.c. 4 = BGN on 5 = BGN, Tx s.c. 6 = BGN, Rx s.c. 7 = BGN, Tx, Rx, s.c. 8 = BGN off,		1 digit code Using the factory setting recommended	Default = 6
67		Transmit gain (1- 8)		1 digit code Using the factory setting recommended	Default = 5
68		Receive gain (1 – 8)		1 digit code Using the factory setting recommended	Default = 6
69		Second Access Code (4 characters) (numeric keys, *, and #)		4 digit code	Default = 5678

User Operating Mode:

When the handset is off the cradle or the [SPK] key is pressed, the phone will go off hook. The LCD will display the greeting message and the current Audio mode. While the phone is off hook and it detects a Call Disconnect pulse from the CO line or PABX, the phone will go on hook, even with the handset off the cradle.

1. Audio Modes:

The "Zone 1" Phone has two Audio Modes Handset and Hands-free. The LCD display will show the current status of the Audio mode. The [↑] key and [↓] key are volume control keys. Pressing these two keys will adjust the volume of the current hearing device

a. Handset mode:

When the phone is on hook or while it is off hook in Hands-free Mode, removing the handset from the cradle will set the phone to the Handset Mode. In this mode, the speaker and the hands-free microphone are off. The headset receiver and microphone are off if the headset is configured to replace the speaker. The volume control keys will adjust the volume on the handset earpiece volume. The phone will go back to on hook if the handset is returned to the cradle.

b. Hands-free Mode:

When the phone is on hook, or while it is off hook in Handset Mode pressing the [SPK] key will set the phone to the Hands-free Mode. After the phone has switched from Handset Mode to Hands-free Mode, returning the handset to the cradle will not put the phone on hook. The phone will go back to on hook if the [SPK] key is pressed. Hands-free Mode can be configured to Speaker Phone or Headset by setting the contents of register #54 to 1 or 2 respectively. Speakerphone capability is standard however; a headset is optional.

i. Speaker Phone Mode:

When the phone is configured to Speaker Phone the hands free MIC and the speaker are on, the handset MIC and headset are off. The volume control keys will adjust the speaker volume.

ii. Headset Mode:

When the phone is configured to Headset Mode, the hands free MIC, speaker, and the handset are off. The volume control keys will adjust the volume on headset earpieces.

Note: be sure that Register #54 is set correctly.

2. Dialing Modes:

There are four signaling modes in "Zone 1" Phone. *Register #52.*

A. DTMF dialing mode (RS 470 and BTR 21):

In the DTMF mode, using keypad dial, redial, or Phone Book dial will result in having the phone dialed in DTMF tones.

B. Pulse dialing (break/make ratio of 60:40) mode:

In the 60:40 Pulse dialing mode, using keypad to dial, redial, or Phone Book dial will result in having the phone number dialed in pulse with the break/make of 60:40 at 10pulses/sec. In this mode the Link key (timed break key), the '*' key, and the '#' key are not supported.

C. Pulse dialing (break/make ratio of 66:33) mode:

In the 66:33 Pulse dialing mode, using keypad to dial, redial, or Phone Book dial will result in having the phone number dialed in pulse with the break/make of 66:33 at 10pulses/sec. In this mode the Link key (timed break key), the '*' key, and the '#' key are not supported.

3. Numeric keys, [*] key, and [#] key on the Keypad:
While in the Operating Mode, all the numeric keys, the '*' key, and the '#' when pressed will be dialed out, (if the phone is set to pulse dialing the [*] and [#] keys are not supported). The maximum number of characters that can be dialed out is 32. The dialed out characters will be displayed on the LCD starting from the first character to the left on the first line and ending at the last character to the right on the second line. The dialed number on the display will be maintained for 6 seconds, then the display will switch back to show the Audio Mode status until further numeric keys are pressed.
4. The [↑] and [↓] keys:
The up and down arrow keys adjust the volume of the hearing device currently being used. Each press of these keys will increase or decrease the volume by 2 dB within a range of 15 dB. The LCD will display the current volume setting for two seconds then switch back to show the Audio Mode status.
5. [Link] key:
The [Link] key that is sometimes referred to as [Flash] will provide a timed disconnect to the current on the phone line. The period can be configured to 280ms or 600ms and is required for some Central Office or PABX functions.
6. [RLS] key:
The [RLS] key will disconnect the phone from the phone line for one second to reset the phone line for next call.
7. [Redial] key:
Pressing the [Redial] key after going off hook will dial out the last keys stored in the dial buffer. It may be different from all the keys that were pressed in the previous call. The number dialed out will be displayed on the LCD starting from the first character to the left on the first line and ending at the last character to the right on the second line. The dialed number will be displayed for two seconds then the LCD will switch back to show the Audio Mode status. The arrow keys will resume the volume control function. Subsequent keypad dialing is resumed.
8. Quick dialing and Phone Book Call:
Quick dialing and Phone Book calling must be used just after going off hook. If manual dialing is used, Quick dialing and Phone Book will be disabled.
 - A. *Quick dialing:*
There is provision for 10 Quick dialing phone numbers in the phone. To activate Quick dialing, press the [MR] key. The register number prompt will be displayed:
Enter REG #:
[REG 0 to 9]
Press one numeric key (0 to 9). The phone number in the register will be dialed out to the phone line as well as being displayed on the LCD. The dialed number will be displayed for two seconds then the LCD will switch back to show the Audio Mode status. The arrow keys will resume the volume control function. Subsequent keypad dialing is resumed.
 - B. *Phone Book dialing:*
There are twenty phone numbers in the Phone Book including the 10 Quick dialing phone numbers. To activate the Phone Book press [MR] twice. The register number prompt will be displayed:
Enter REG #:
[Phone List]

Enter a two-digit number or use the arrow keys to scroll through the register. The associated phone number will be displayed.

Use the [↑] or [↓] keys to shift through the Phone Book.

Press [MR] key to dial out the current register phone number.

The dialed number will be displayed for two seconds then the LCD will switch back to show the Audio Mode status. The arrow keys will resume the volume control function. Subsequent keypad dialing is resumed.

Note:

When a phone number register is clear, calling it through Quick dial or Phone Book dialing will result in no dialing at all.

All phone number registers that are not used should be cleared.

9. Time out:

The time out counter will enforce a fixed call duration that is programmable from one minute to nine minutes or alternatively 60 minutes, starting from the moment the phone is off hook. It will generate 3 beep tones, and display a time out message on the LCD ten seconds prior to disconnecting the call. This feature is applicable in both Handset and Hands-free modes. This feature is useful when the user forgets to return the handset back to the cradle, or does not press the [SPK] key to hang up the call while the phone is in the Hands-free Mode.







(This feature can set to maximum 60 minutes).

After time out, the phone is disconnected from the phone line. The phone will ring when there is an incoming call. The handset has to be returned to the cradle for the phone to be used in handset or hands-free mode to answer the call.

10. Push-to Talk Handset:

If the telephone is equipped with a push-to-talk handset, the button must be pressed in order for voice to be transmitted.

Specifications	
Performance	
AUDIBLE RANGE FREQUENCY RESPONSE	300 – 3400 Hz
HANDS FREE SPEAKER OUTPUT (MAX @ 1KHz)	~85dB @ 1 METER
RECEIVER VOLUME ADJUSTMENT	8 STEPS, 2 dB/STEP
SPEED DIAL	10 REGISTERS OF 20 DIGITS EACH
PHONE BOOK DIAL	20 REGISTERS OF 20 DIGITS EACH, (INCLUDES SPEED DIAL NUMBERS)
FLASH	280/600 mSec TIMED DISCONNECT
REDIAL	32 DIGITS MAXIMUM
NORTH AMERICAN CONFIGURATION	
DIALING METHOD	DTMF OR 40:60 PULSE AT 10 PPS
EUROPEAN CONFIGURATION	
DIALING METHOD	DTMF OR 33:66 PULSE AT 10 PPS
CONFORMS TO	RESIDENTIAL AND INDUSTRIAL AREAS ETSI TBR 38: MAY 1998 (ACOUSTICS) ETSI TBR 21: JANUARY 1998 (TELEPHONE NETWORK)
Electrical	
RINGER SENSITIVITY	40 – 100 V, 16 – 25 Hz
LINE VOLTAGE	24 – 56 VDC
LOOP CURRENT	22 - 100 mA
CONNECTION METHOD	TERMINAL BLOCKS
FUSE - MAIN TELEPHONE CCT	250 mA – AUTO RESET
FUSE – RING DETECT RELAY	5 AMP 250 VOLT FAST BLOW
RINGER OUTPUT	>85 dB @ 1M
RINGER IMPEDANCE WITHOUT RING DETECT RELAY	>7K OHMS @25 Hz, 30-90 VAC >4K OHMS @ 50Hz, 30-90 VAC
RINGER IMPEDANCE WITH RING DETECT RELAY	>4K OHMS @25 Hz, 30-90 VAC (RDR NOT RECOMMENDED @ 50Hz)
SET IMPEDANCE	600 OHMS NOMINAL
MAXIMUM LOOP	15,000 Ft (4,600 M) OF 22 AWG COPPER
Environmental	
INGRESS PROTECTION RATING	IP66
OPERATING TEMPERATURE	-30° TO +60° C (-22° TO +140° F)
STORAGE TEMPERATURE	-50° TO +80° C (-58° TO +176° F)
HUMIDITY	0 TO 95% RH
DUSTPROOF	FULLY GASKETED ENCLOSURE
Mechanical	
HOOK SWITCH (CRADLE SWITCH) LIFE	>1 000 000 OPERATIONS
HOUSING MATERIAL	GLASS FILLED POLYESTER (CARBON LOADED)
HANDSET MATERIAL	GLASS FILLED POLYESTER (CARBON LOADED)
DIMENSIONS (H x W x D) WALL MOUNTED	291 x 241 x 139 MM (11.5 x 9.5 x 5.5 INCHES)
NET WEIGHT	3.95 KG (8.68 LBS)
SHIPPING DIMENSIONS	407 x 267 x 242 MM (16 x 10.5 x 9.5 INCHES)
SHIPPING WEIGHT	4.8 KG (10.5 LBS)
MOUNTING WALL STRENGTH REQUIREMENT	15.8 KG (34.8)LBS
MICROPHONE	NOISE CANCELING
RECEIVER	HEARING AID COMPATIBLE (HAC)
MOUNTING	DESK OR WALL
WIRING ACCESS	2 x M20 & 1 x M12 CABLE GLAND ENTRY POINTS

Compliance	
CE 2813	
NOTIFIED BODY	SIRA CERTIFICATION SERVICES
CERTIFICATE NUMBER	TRAC09ATEX21205X
DECLARATION OF COMPLIANCE BY GUARDIAN TELECOM AVAILABLE	
DECLARATION OF CONFORMITY ON FOLLOWING SHEET	
ATEX coding	<div>  II 2G Ex eb ib mb IIC T5 Gb  II 2D Ex ib mb IIIC T100°C Db  -30°C ≤ Ta ≤ +60°C  II 2G Ex eb ib mb IIC T6 Gb  II 2D Ex ib mb IIIC T85°C Db  -30°C ≤ Ta ≤ +45°C </div>

Replacement Parts		
Part No.	Description	Field Replaceable
P001462	0-Ring for faceplate screws (4 required)	Yes
P002254	Magnetic reed hook switch	Yes
P004123	Nylon fastener for hook switch	Yes
P006608	Handset with coil cord	Yes
P006614	Handset retainer	Yes
P006617	Allen key for faceplate screws	Yes
P006656	Receiver cartridge	No
P006668	M20 Plug	Yes
P006679	M12 Gland	Yes
P006690	M20 Gland	Yes
P006819	Ringer Speaker	No
P006862	M12 Plug	Yes
P007013	Microphone cartridge	No
P007198	PCBA, Main circuit board	No
P007692	DTT faceplate	Yes- if pre-assembled
P007694	Telephone housing base with gasket molded in	Yes
P007741	M4 Faceplate screws (4 required)	Yes
P007744	Handset with armored cord	Yes

EU Declaration of Conformity**EU DECLARATION OF CONFORMITY**

Declaration No. P90XX0420-1

We, the undersigned:

Name of Manufacturer: Circa Enterprises Inc. / Guardian Telecom, A Division of Circa Enterprises Inc.
Address: #10, 2256 29 ST NE, Calgary, AB, T1Y 7G4
Country: Canada

Declare under our sole responsibility that the following apparatus:

Product description: Desktop Telephone – Zone 1
Part No / Model No / SN.: P9051 / DTT-50-Z / PPPP-YYMXXX
P9052 / DTT-60-Z / PPPP-YYMXXX
P9053 / DTR-51-Z / PPPP-YYMXXX
P9054 / DTR-61-Z / PPPP-YYMXXX
P9066 / DTT-50-Z-PTT / PPPP-YYMXXX

Brand name: Guardian Telecom, A Division of Circa Enterprises Inc.

Are in conformity with the following relevant EU legislation:

ATEX directive 2014/34/EU

Based on the following harmonised standards:

EN60079-0:2018
EN60079-7:2015+A1:2018
EN60079-11:2012
EN60079-18:2015+A1:2017

Additional information:

ATEX coding



II 2G Ex eb ib mb IIC T5 Gb
II 2D Ex ib mb IIIC T100°C Db
-30°C ≤ Ta ≤ +60°C
II 2G Ex eb ib mb IIC T8 Gb
II 2D Ex ib mb IIIC T85°C Db
-30°C ≤ Ta ≤ +45°C



Year mark first applied

2013

And therefore complies with the essential requirements of those directives.



The following Notified Body has been involved in the ATEX conformity assessment process:

Notified Body	2812 Element Materials Technology Rotterdam B.V. Zekeringstraat 33, 1014 B.V., Amsterdam, Netherlands
Role:	Issue of ATEX EU Type Examination certificate
Notified Body	2813 CSA Group Netherlands B.V., Utrechtseweg 310, 6812 AR, Arnhem, Netherlands
	Issue of ATEX Quality Assurance Notification (QAN)
Certificate No.	TRAC09ATEX21205X and QAN SIRA 10 ATEX M473

Additional directive compliance exclusive to the above and performed by other 3rd party laboratories:

Restriction of Hazardous Substances: 2011/65/EU

IEC-60945:2008 – Maritime Navigation and Radio Equipment and Systems – When special manufacturing/installation steps followed – *Optional Compliance*.

EN60950-1:2006 – Information Technology Safety

EN55022:2008 & EN55024:1999 – EMC/EMI for Information Technology Equipment.

Name and position of person binding the manufacturer or authorised representative:

Signature



Name:	Kevin Sera
Function:	Director of Engineering
Location:	Circa Enterprises Inc. Guardian Telecom, A Division of Circa Enterprises Inc. #10, 2256 – 29 Street NE, Calgary, AB, Canada, T1Y 7G4
Date of issue:	2021-01-07

Warranty

Guardian Telecom, a division of Circa Enterprises Inc. warrants that its products are free from defective workmanship and materials. Guardian Telecom will, within three years from the date of final sale to the customer, replace or repair any such products provided they are returned to our facilities for examination. Freight costs (including brokerage if applicable), both to and from Guardian, are the sole responsibility of the customer. This warranty does not extend to any items that are deemed to have been misused, modified, neglected, improperly specified, improperly installed, or used in violation of instructions or specifications approved by Guardian Telecom. Guardian Telecom, a division of Circa Enterprises Inc. shall not be liable for incidental or consequential damage of any kind caused by any defect in our product. The total liability shall not, under any circumstances, exceed the purchase price of the products furnished by Guardian Telecom, a division of Circa Enterprises Inc.

A return authorization must be obtained prior to warranty claims or repairs.

Disclaimer

The products covered by this manual are designed for use in Industrial Environments and/or Hazardous Locations. Due to the range of possible applications for these instruments, the manufacturer will not be responsible for damages or losses of any kind suffered as a result of the use of this product, including consequential damages.

Warning

This device may be opened and reassembled by qualified personnel only, for the purposes of installing the product, making adjustments and replacing components, following the instructions in the product manual. Before opening this telephone, disconnect the wiring at the demarcation block.

High voltages may be present in this product when connected to telephone wiring.

Service Telephone Number

1-800-363-8010

Guardian Telecom provides a customer service telephone number that is toll-free within North America. If you need assistance when installing or operating this product, please call the toll-free telephone number between regular business hours (7:00AM-4:00PM), Mountain Time. If you are calling outside of regular business hours, please leave a detailed message, and a member of Guardian Telecom's Service Department will return your call as soon as possible. If your product requires service, Guardian personnel will supply you with an RMA (return materials authorization) number over the telephone or through our web site product return page. This number must be included with your return address and the name of the person to contact.

Guardian Telecom, a division of Circa Enterprises Inc.

Toll-free 1-800-363-8010

Ph. (403) 258-3100

Fax. (403) 255-2595

www.guardiantelecom.com

Feedback

Guardian Telecom continually strives to make reliable, durable, and easy to use products. If you, as an installer or user of our equipment, have any suggestions for improvements to this or any of our products or documents, including this manual, we would appreciate hearing from you.

Guardian Product Return	
Guardian products have been quality tested and are in full working order when shipped from the factory, given the rugged nature of these products shipping is not expected to damage a unit. In the unlikely event of a malfunction, Guardian follows the three-step procedure below.	
Step I - On-Site Correction	
<ul style="list-style-type: none"> The most common source of difficulties with a new product is improper installation in one of two ways: incorrect wiring connections or connection to an incorrect power source. 	
<ul style="list-style-type: none"> Product wiring needs to be properly connected to the on-site wiring. Correct wiring instructions are shown in the user manual included with the product. 	
<ul style="list-style-type: none"> Connecting a telephone to a standard power source, rather than tip & ring, will trip the telephone's internal resettable fuse. In the event that the fuse trips, disconnect the telephone from the power source and reconnect following the wiring diagrams provided with the product. 	
Step II - Return Materials Authorization (RMA)	
<ul style="list-style-type: none"> When a product has been installed following user manual instructions and the unit fails to operate, the user must contact Guardian Telecom to obtain authorization to return the product. This can be done by completing and submitting an RMA form that is available at https://www.guardiantelecom.com/support/rma/ or by calling the service telephone number given in this manual. <i>Correct this.</i> 	
<ul style="list-style-type: none"> After providing information on the product, the owner and the nature of the problem, Guardian will issue a RMA number, to be shown on documentation returned with the product. 	
<ul style="list-style-type: none"> In addition to the RMA number, shipping documents should include name, address and telephone number of the owner along with contact information for the person responsible for the repair and/or the user who identified the malfunction. 	
<ul style="list-style-type: none"> (Where a product is being returned for repair from outside of Canada, customs documentation must show the product's serial number, date of export [date of purchase], and a notation that the equipment is: "Canadian goods returning.") 	
Step III - Factory Authorized Service	
<ul style="list-style-type: none"> Once received, each product is carefully inspected and tested. If the product is under warranty, repairs are completed and the product returned to the owner, generally within five working days of receipt by the factory. 	
<ul style="list-style-type: none"> A product that has been subjected to misuse, neglect or accident or is beyond the warranty period will be evaluated. The service department will provide the owner's representative with a repair cost estimate. Once approved, repairs are completed and the product returned, generally within five working days. 	

Storage

General Storage (All situations):

- Note any stacking limits or warnings on packaging (if any).
- Do not store in temperatures over +80C.
- Store in original packaging if possible until needed.

Long Term Storage (> 6 Months):

- If area is air-conditioned and not subject to high changes in humidity, continue to store in original packaging.
- If wide humidity shifts are expected, then use these steps:
 - Remove product from packaging (including plastic bags) and store on shelf in open air.
 - If area is subject to a high degree of dust, to help maintain cosmetic appearance you can cover with cloth (Do not cover with plastic or materials that will trap moisture) or clean periodically.
 - Do not store out of packaging long term where they are exposed to sunlight. Long-term exposure to UV may cause fading on plastic parts.

Cleaning Tips for Guardian Telephones

Guardian Telephones may occasionally need to be cleaned to maintain appearance. Generally, wiping the surface with a clean, water-dampened cloth will remove most films or residues. If the soiling is too stubborn for plain water, a mild detergent solution may be used. Be sure to wipe away any detergent residue with a plain water dampened cloth. The Telephone may be cleaned with any general-purpose household glass and surface type cleaner. Do not spray the telephone directly! Spray the cleaner on a soft cloth then wipe the surface. Pre-treated cloths such as those used for eyeglasses or cameras, may be used to clean the Telephone. Premoistened towelettes may also be used, however, avoid those containing lanolin or aloe, as they will leave a slippery residue. The handset and surface of the telephone may be cleaned with disinfectants used for general cleaning in a medical environment. Isopropyl alcohol may be used applied with a cloth. Avoid using alcohol on silicon-based keypads, since doing so may significantly degrade legibility.

- Do not use furniture polishes, waxes or plasticizer-based cleaner (Armor All etc.)
- Do not use lanolin, aloe, glycerin or other skin care type products.
- Do not apply any solvent such as acetone, mineral spirits etc.
- Do not directly spray or immerse the handset.



Guardian Telecom, a division of Circa Enterprises Inc.
Toll-free 1-800-363-8010
Phone (403) 258-3100
Fax. (403) 255-2595
www.guardiantelecom.com
E-mail: sales@guardiantelecom.com
(CTRL + Click to open message box)

Tough. Trusted. True.

© Circa Enterprises 2021