



Weather Resistant VoIP-H Telephones

WRR/WRT-V-H Series

Installation & Operation

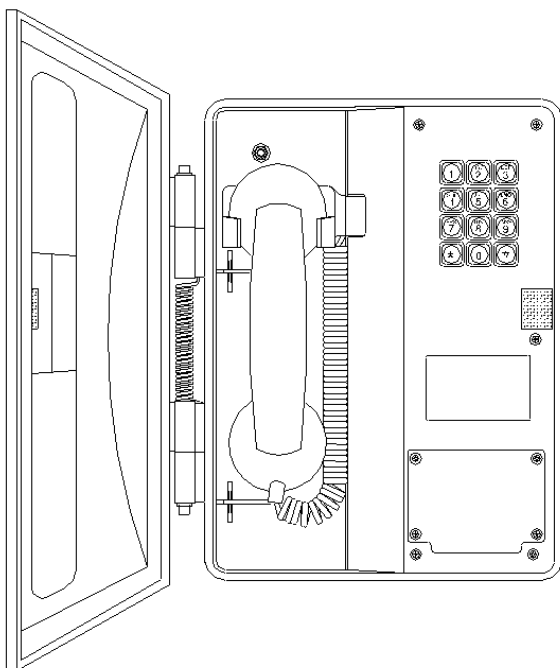

WRT-10-V-H

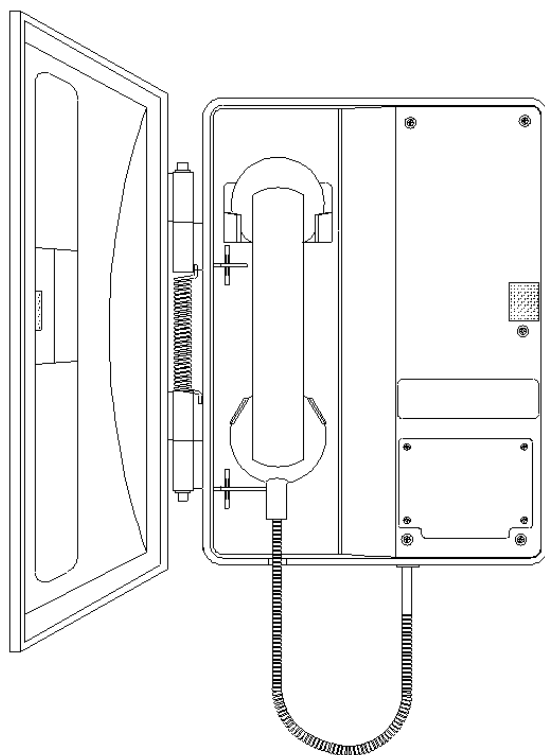

WRR-41-V-H

PoE WRR/WRT-V-H Installation Guide P007557 Rev. B

COPYRIGHT NOTICE:

© 2015, Guardian Telecom Inc., ALL RIGHTS RESERVED.

This manual and the related materials are the copyrighted property of Guardian Telecom Inc. No part of this manual or related materials may be reproduced or transmitted, in any form or by any means (except for internal use by licensed customers), without prior express written permission of Guardian Telecom Inc. This manual, and the products, software, firmware, and/or hardware described in this manual are the property of Guardian Telecom Inc. provided under the terms of an agreement between Guardian Telecom Inc. and the recipient of this manual, and their use is subject to that agreement and its terms.

DISCLAIMER: Except as expressly and specifically stated in a written agreement executed by Guardian Telecom Inc., Guardian Telecom Inc. makes no representation or warranty, express or implied, including any warranty or merchantability or fitness for any purpose, with respect to this manual or the products, software, firmware, and/or hardware described herein, and Guardian Telecom Inc. assumes no liability for damages or claims resulting from any use of this manual or such products, software, firmware, and/or hardware. Guardian Telecom Inc. reserves the right to make changes, without notice, to this manual and to any such product, software, firmware, and/or hardware.

OPEN SOURCE STATEMENT: Certain software components included in Guardian products are subject to the GNU General Public License (GPL) and Lesser GNU General Public License (LGPL) "open source" or "free software" licenses. Some of this Open Source Software may be owned by third parties. Open Source Software is not subject to the terms and conditions of the Guardian COPYRIGHT NOTICE or software licenses. Your right to copy, modify, and distribute any Open Source Software is determined by the terms of the GPL, LGPL, or third party, according to who licenses that software.

Software or firmware provided by Guardian that is unrelated to Open Source Software is copyrighted by Guardian, subject to the terms of Guardian licenses, and may not be copied, modified, reverse-engineered, or otherwise altered without explicit written permission from Guardian Telecom Inc.

TRADEMARK NOTICE: Guardian Telecom Inc. and the Guardian Telecom Inc. logos are trademarks of Guardian Telecom Inc. Other product names, trademarks, and service marks may be the trademarks or registered trademarks of their respective owners.



CONNECTED. PROTECTED.

Toll-free 1-800-363-8010

Phone (403) 258-3100

Fax. (403) 253-4967



www.guardiantelecom.com

E-mail: sales@guardiantelecom.com

This manual gives instructions for the physical installation of WRR/WRT-V-H telephones. For setup and configuration refer to manual P007402.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Install in accordance with the manufacturer's instructions.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
7. Only use attachments/accessories specified by the manufacturer.
8. Refer all servicing to qualified service personnel.
9. Prior to installation, consult local building and electrical code requirements.

	<p>Warning</p> <p><i>Electrical Hazard:</i> This product should be installed by a licensed electrician according to all local electrical and building codes.</p>
	<p>Warning</p> <p><i>Electrical Hazard:</i> To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.</p>

This product meets the applicable Industry Canada technical specifications. / Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada.

If trouble is experienced with this equipment (DTR-V-H and DTT-V-H), for repair or warranty information, please contact Guardian Telecom at 1-800-363-8010. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

If this equipment requires AC power it is suggested that a surge arrestor be used.

SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C AND D HAZARDOUS LOCATIONS OR NONHAZARDOUS LOCATIONS ONLY.

WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT WHILE THE CIRCUIT IS LIVE OR UNLESS THE AREA IS KNOWN TO BE FREE OF IGNITABLE CONCENTRATIONS.

WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2 HAZARDOUS LOCATIONS.

WARNING – EXPOSURE TO SOME CHEMICALS MAY DEGRADE THE SEALING PROPERTIES OF MATERIALS USED IN THE SEALED RELAY DEVICE.

Table of Contents

1.	Product Overview	6
2.	Typical System Installation	6
3.	Features	7
4.	Installation	10
5.	Operation.....	10
6.	Supported Protocols	11
7.	Supported SIP Servers.....	11
8.	WRR/WRT-V-H Telephones Setup	11
8.1.	Connections	11
8.2.	Connecting a Device to the Auxiliary Relay	12
8.3.	Identifying the Connector Locations and Functions.....	13
8.4.	Network Connectivity, and Data Rate	14
8.4.1.	Verify Network Activity.....	14
8.5.	RESET Switch.....	15
8.5.1.	Announcing the IP Address	15
8.5.2.	Restore the Factory Default Settings.....	15
8.6.	Adjust the Volume	15
9.	Product Specifications	16
10.	Field Repairs	17
11.	Replacement Parts	18
12.	Cleaning Tips for Guardian Telephones	19
13.	Warranty	20
14.	Disclaimer.....	20
15.	Warning	20
16.	Service Telephone Number	20
17.	Feedback.....	20
18.	Guardian Product Return.....	21

Figures

Figure 1 - Typical Installation	6
Figure 2 - WRT-V-H Features	8
Figure 3 - Overall Dimensions.....	8
Figure 4 - Wiring.....	9
Figure 5 - Terminal Block Connections	11
Figure 6 - Auxiliary Relay Wiring Diagram	12
Figure 7 - Connector Locations	13
Figure 8 - Network Activity	14
Figure 9 - RESET Switch	15

Tables

Table 1 - Connector Functions	13
-------------------------------------	----

Package Contents

(1) WRR-V-H or WRT-V-H Telephone.

Note: Installation and Operation Manual, Setup and Configuration Manual, Guardian Discovery Utility, Interoperability Guide, VoIP Technical Support, Firmware and Autoprovisioning template are all available at www.guardiantelecom.com.

Models

P6301	WRT-10-V-H Weatherproof telephone with waterproof keypad and 6' curly cord.
P6306	WRT-30 V-H Weatherproof telephone with metal keypad and 6' curly cord.
P6307	WRT-40-V-H Weatherproof telephone with metal keypad and armored handset cord.
P6308	WRR-11-V-H Weatherproof ringdown telephone with 6' curly cord.
P6309	WRR-41-V-H Weatherproof ringdown telephone with armored handset cord.

Options

Stainless Steel Mounting Plate	(MP)	(Standard on WRR 41-V-H & WRT-40-V-H)
20' Heavy Duty Curly Cord	(20VC)	(Only on WRT-10/30-V-H)
Noise Canceling Microphone	(NC)	
Grey Enclosure	(GRV)	

Accessories

POE – Injector – Auxiliary Power Supply	(Contact Sales)
Loud Ringers and Strobe Lights	(Contact Sales)

Registering Your VoIP Product

To register your VoIP product send an email to info@guardiantelecom.com.

Be sure to include “Guardian VoIP Registration” in the subject field of your email.

Include the following information:

1. Company Name (Req'd)
2. Address (Optional)
3. Device Model (Req'd)
4. Serial Number (Req'd)
5. Date of purchase (Req'd)
6. Name of Supplier (Req'd)
7. Prime Contact (Req'd)
8. Secondary Contact (Optional)
9. Contact Info: Email Address(es) (Req'd)
10. Phone Info: (Optional)

1. Product Overview

WRR-V-H and WRT-V-H Series Weatherproof Telephones

Guardian weatherproof telephones are designed to provide safe, reliable communication in areas prone to high humidity, chemical vapors, dust and physical abuse. Several variations and options are available to suit the end user's requirements. WRR-V-H and WRT-V-H Telephones are compatible with most SIP-based IP PBX servers that comply with SIP RFC 3261. Users can remotely monitor and program settings through a web browser to configure telephones on their network.

WRR-11-V-H, WRT-10-V-H and WRT-30-V-H are standard models with a curly cord. WRR-41-V-H and WRT-40-V-H are vandal resistant models with an armored handset cord. WRT-V-H telephones are equipped with a keypad and WRR-V-H models are ringdown.

2. Typical System Installation

The Voice-over-IP (VoIP) WRR and WRT-V-H Telephones are Power-over-Ethernet (PoE 802.3af) and Voice-over-IP (VoIP) two-way communications devices that easily connect into existing local area networks (LANs) with a single cable connection.

Figure 1 illustrates how the WRR-V-H and WRT-V-H Telephones can be installed as part of a VoIP phone system.


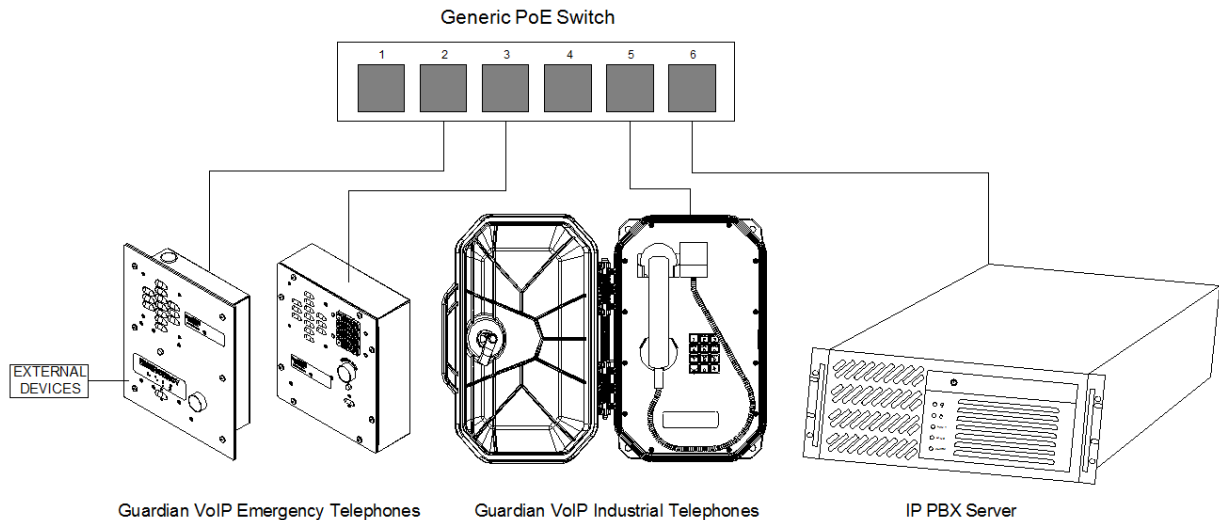


Figure 1 - Typical Installation

3. Features

- *Enclosure*
 - Valox body construction
 - weather and corrosion resistant
 - spring loaded hinged door
- *Temperature range -22 ° to +140 °F (-30 ° to +60 °C)*
- *12-key metal keypad for extended life (WRT-30/40-V-H)*
- *Optional conformal coated circuit boards are resistant to corrosive agents (e.g. H₂S, SO₂ and NH₃) and environments with high humidity*
- *Waterproof connections & stainless steel fittings for longer life*
- *Corrosion protected and powder coated steel faceplate*
- *Magnetic Reed Hook Switch - no moving parts*
- *Easily mounted on any sturdy vertical structure*
- *Noise Reducing Microphone allows a high level of intelligibility in locations with high background noise*
- *Armored Handset Cord (WRR-41-V-H & WRT-40-V-H only) withstands severe use*
- *Heavy duty G Type industrial handset*
- *Handset retainers to maintain on-hook status*
- *Modular parts for easy service*
- *Hearing-Aid Compatible & Receiver Volume Adjustment*
- *Compatible with inductively coupled hearing-aid devices*
- *Adaptive full duplex operation*
- *Compatible with most SIP-based IP PBX servers that comply with SIP (RFC 3261).*
- *Network web management interface*
- *Guardian discovery utility makes it easy to detect, locate and launch the web based configuration screens*
- *Product self diagnostic testing available through web interface*
- *Network adjustable speaker volume and microphone sensitivity*
- *Network downloadable firmware*
- *PoE 802.3af enabled (Powered-over-Ethernet) or alternate power source*
- *Web Based User Interface allows remote setup of network, product operations, updates, self diagnostics and other functional access.*
- *Dual speeds of 10 Mbps and 100 Mbps*
- *Network/Web management*
- *Network configurable relay activation settings*
- *Dial Out Extension supports the addition of comma delimited pauses before sending additional DTMF tones*
- *Network downloadable product firmware*
- *Tamper proof design*
- *Autoprovisioning*
- *Configurable audio files*
- *Event activation – (see manual – events section)*
- *One year warranty*
- *Peer-to-peer capable*
- *Optional security screws with driver bit*

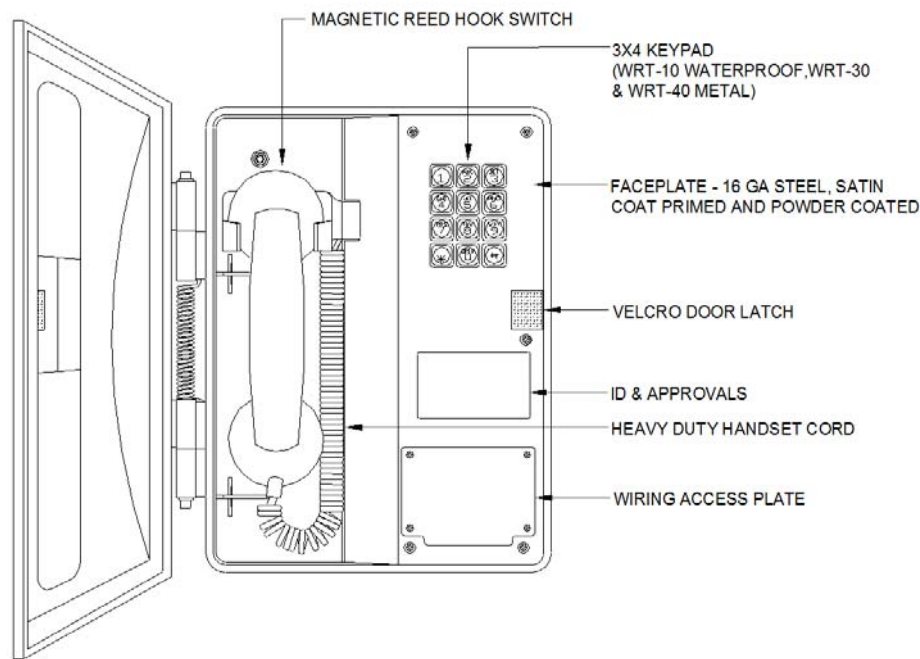

(WRR-V-H Similar – No Keypad)
Figure 2 - WRT-V-H Features



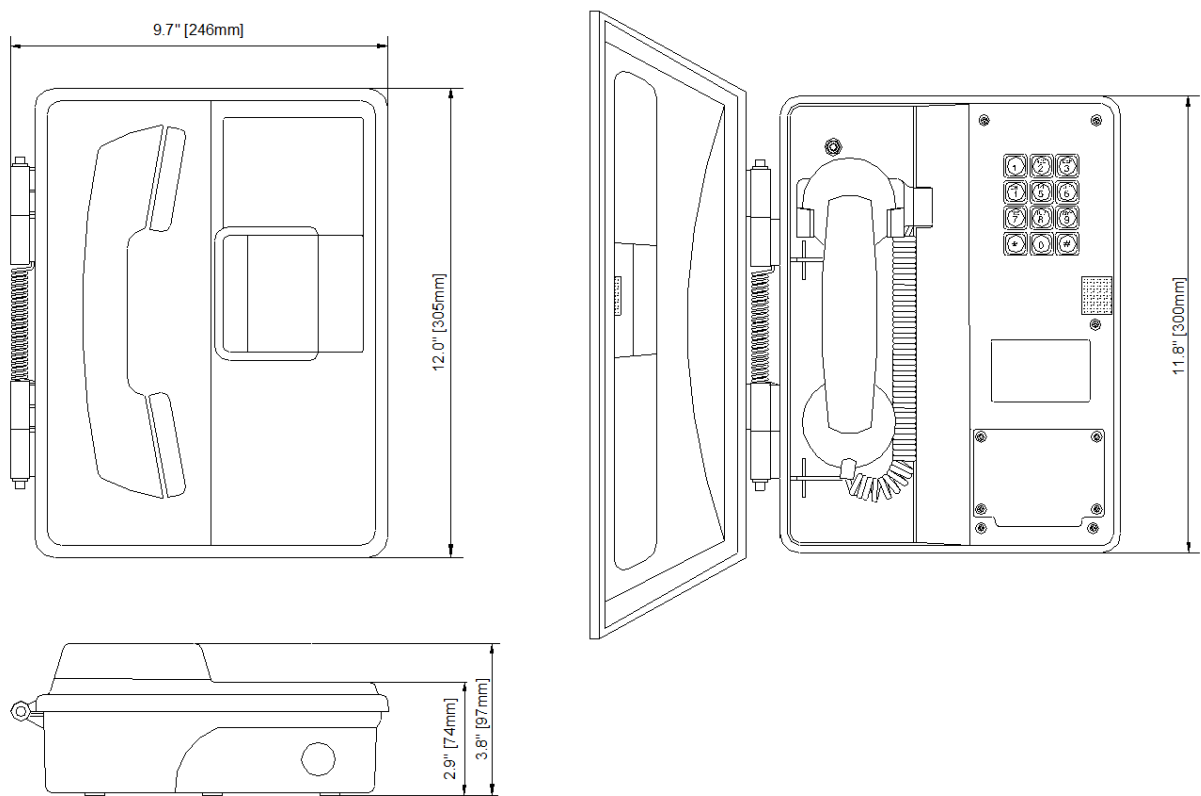


Figure 3 - Overall Dimensions

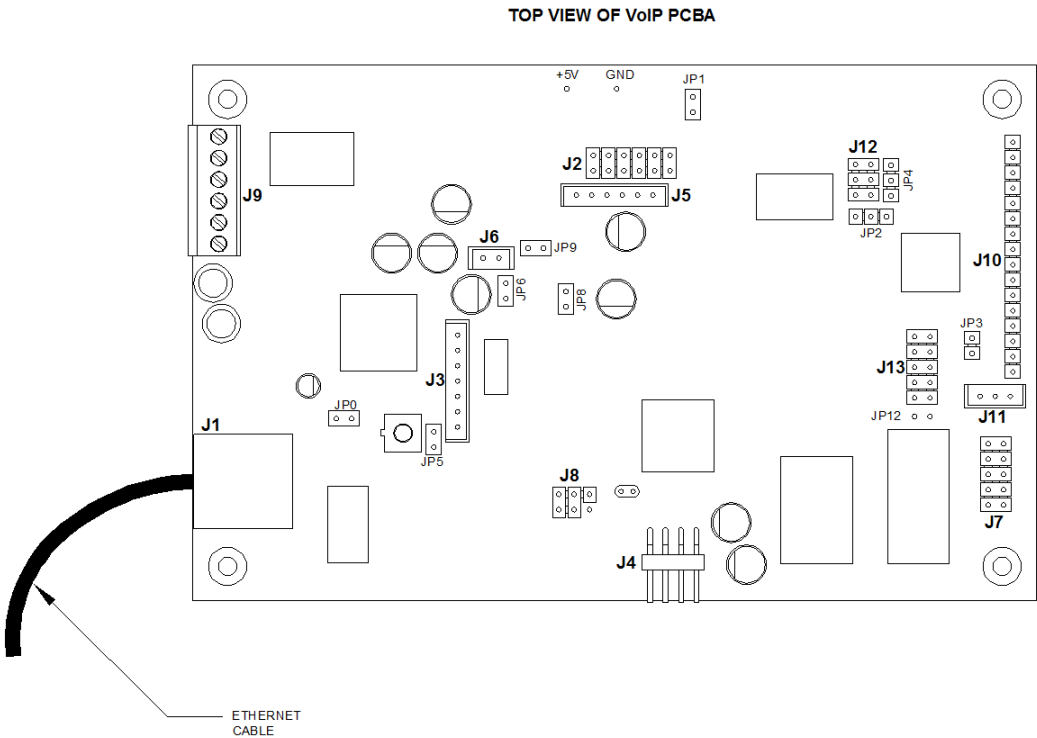

J1: STANDARD 8 PIN RJ45 10/100Base-T And power input via Power over Ethernet

Figure 4 - Wiring

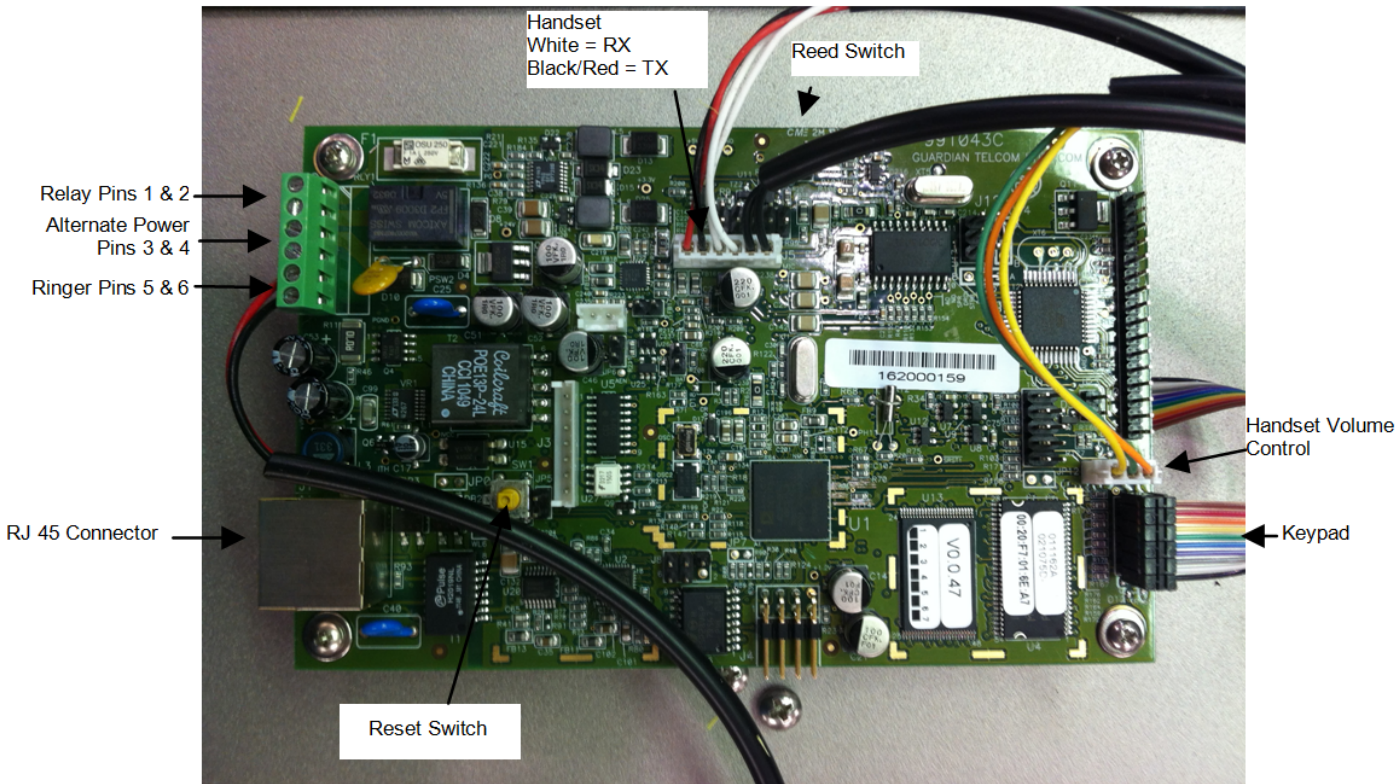

4. Installation

Follow all appropriate electrical codes and use only approved electrical fittings for the installation.

Determine if power to operate the telephone will be provided via the Ethernet or if external power will be required. If external power is required install Guardian's Auxiliary Power Supply or equivalent.

To maintain Ingress Protection / NEMA ratings use appropriately rated hardware and waterproofing techniques.

Choose a wall location that is free of obstructions and permits space for conduit runs.

Ensure mounting can support 7 lbs (3.2kg) and any additional foreseeable load.

To Avoid The Danger Of An Accidental Shock or Circuit Damage

- If using aux power supply, ensure it is unplugged during installation.

Separate the faceplate from the housing.

Use the template provided or the enclosure itself to locate and drill holes for mounting screws.

Secure the unit to the wall.

Bring the Network cable into the enclosure through the conduit entrance and plug into the RJ-45 connector on the PCBA.

If using an alternate power supply connect the supply to the terminal block J9. Before doing so determine if power is supplied over the Ethernet cable.

Connect the on-board relay if utilized.

Reconnect the faceplate harness.

Ensure all connections are secure.

Determine that the telephone is properly connected by pressing the RESET switch for less than five seconds to announce the IP address. LEDs on the RJ45 connector indicate network connection and activity.

Replace the faceplate.

Set up and configure if changes are required to the default settings.

Test the unit by calling to and from another telephone, preferably a VoIP device.

See: Figure 5 - Terminal Block Connections

See: Figure 3 - Overall Dimensions

Note: Be careful when removing the faceplate. The circuit board is on the faceplate.

Tip: Use ¼" or M8 screws to secure the unit to the wall.

See: Figure 5 - Terminal Block Connections

See: Section 8.2 Connecting a Device to the Auxiliary Relay

See: Section 8.5 RESET Switch and Figure 8 - Network Activity

See: Manual P007402 – Setup and Configuration.

5. Operation

WRT-V-H telephones may be set up for either keypad dialing or auto-dialing.

If the telephone is configured for keypad dialing operation is identical to most other single line telephones.

If the telephone is configured for auto dialing lift the handset and press the number assigned to the extension to be dialed.

WRR-V-H telephones will dial the programmed number when the handset is lifted.

Adjust the receiver volume with the switch in the handset.

Note: The details are explained in the Setup and Configuration Manual P007402.

6. Supported Protocols

The WRT-V-H Telephone with Keypad supports:

- SIP (Session Initiation Protocol)
- HTTP Web-based configuration
Provides an intuitive user interface for easy system configuration and verification of WRT-V-H Telephone with Keypad operations.
- DHCP Client
Dynamically assigns IP addresses in addition to the option to use static addressing.
- TFTP Client
Facilitates hosting for the Autoprovisioning configuration file.
- RTP
Facilitates autoprovisioning configuration values on boot.
- Audio Encodings
 - PCMU (G.711 mu-law)
 - PCMA (G.711 A-law)
 - Packet Time 20 ms

7. Supported SIP Servers

As a SIP device, this product will operate with most IP PBX servers (see list at www.guardiantelecom.com).

8. WRR/WRT-V-H Telephones Setup

8.1. Connections

Figure 5 shows the pin connections on the J9 (terminal block). This terminal block can accept a wire range from 16 AWG to 26 AWG.

Note: As an alternative to using PoE power 12 to 24 VDC at 500 mA can be supplied to the terminal block.

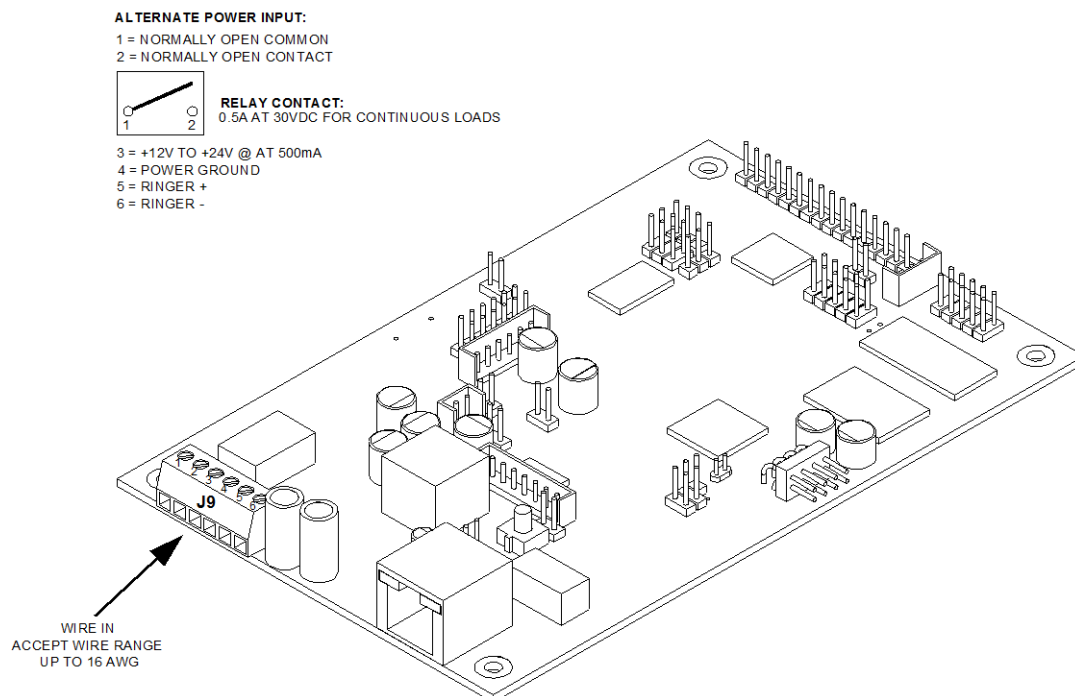


Figure 5 - Terminal Block Connections

8.2. Connecting a Device to the Auxiliary Relay

The WRR/WRT-V-H Telephones incorporate one on-board relay located on the PCBA, which enables users to control a low current external relay or device. An external relay could control a ringer, strobe light, door lock or any other apparatus. The on board relay is protected by a 1 Amp, non-replaceable fuse. **Power switched by the relay should not exceed 0.5 Amps @ 30VDC.** The PCBA is not designed to handle AC voltages.

Warning: The relay circuitry contains a non-replaceable 250VAC 1A fuse. If the fuse blows the board must be returned to Guardian or an approved service center for repair.

The Telephone relay activation time is selectable through the web interface on the Device Configuration Page. The relay is controlled by DTMF tones generated from the phone to which the VoIP phone is connected; no matter which one initiated the call. The DTMF tones are selectable from the web interface as well.

Note: The three digit code for the auxiliary relay must be sent in conformance with RFC2833 DTMF generation.

See: Figure 6 - Auxiliary Relay Wiring Diagram

See: Manual P007402
Setup and Configuration

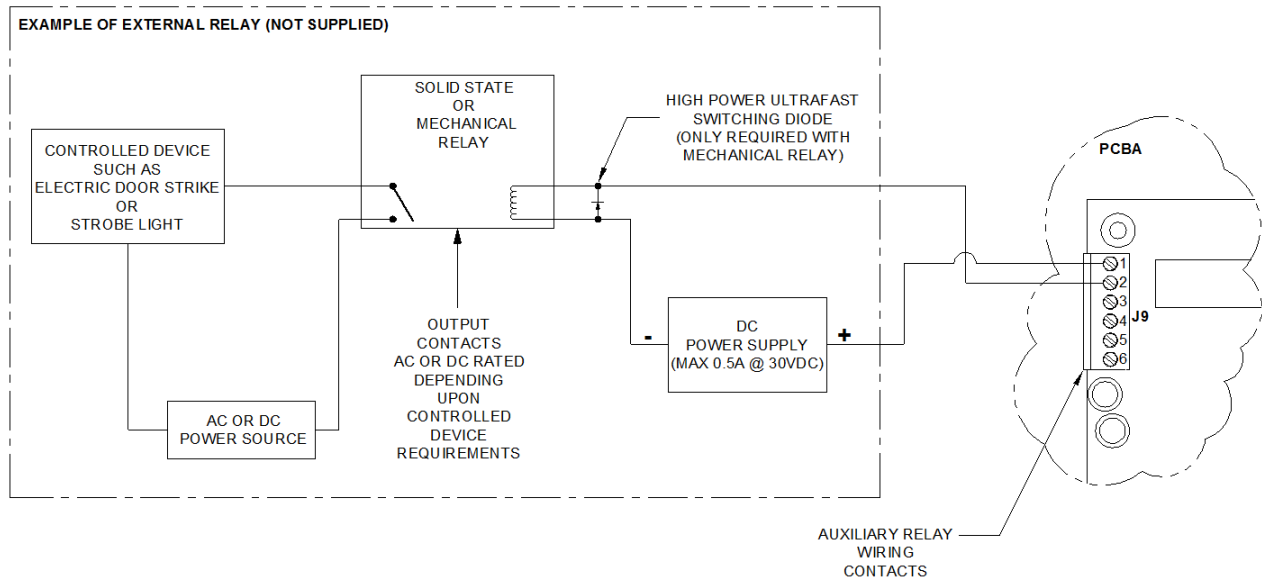


Figure 6 - Auxiliary Relay Wiring Diagram

8.3. Identifying the Connector Locations and Functions

See Figure 7 and Table 1 to identify the connector locations and functions.

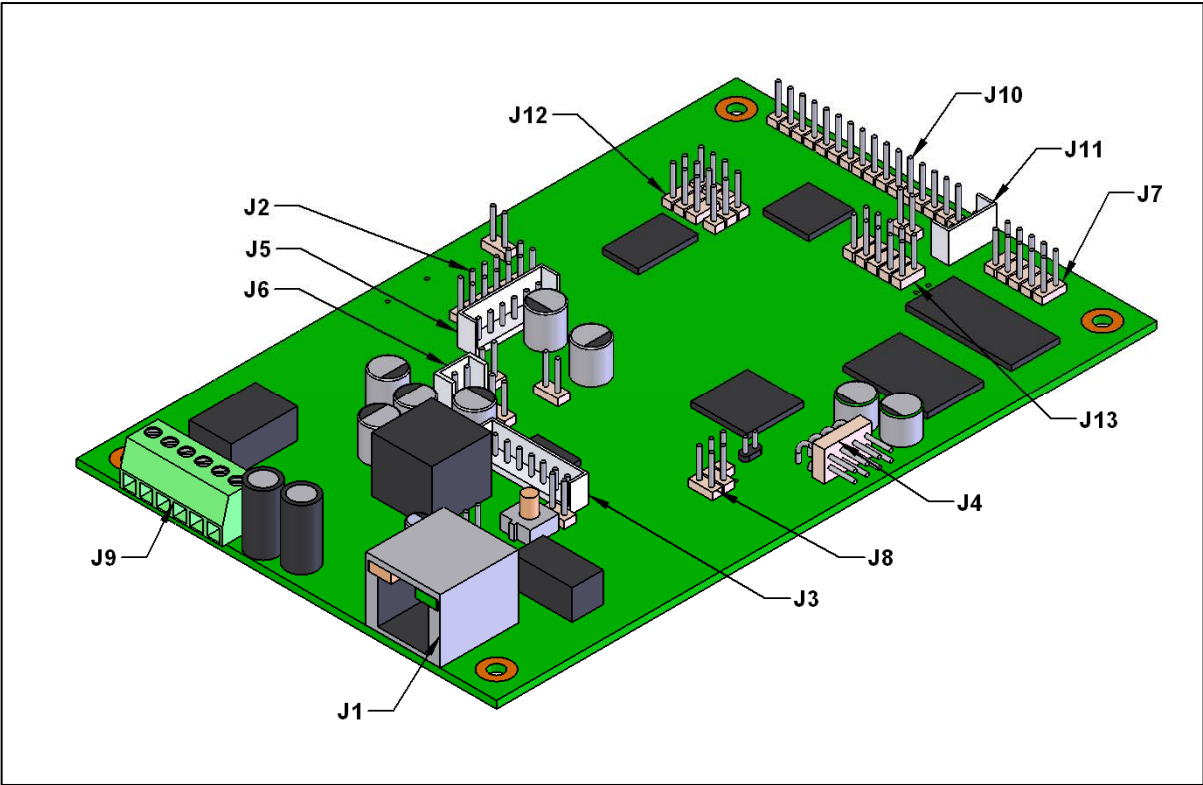


Figure 7 - Connector Locations

Connector	Function
J1	PoE Network Connection (RJ-45)
J2	Hands free Microphone Interface/LED Interface
J3	Not used
J4	JTAG Interface
J5	Handset/Reed Switch Interface
J6	Speaker Interface
J7	Keypad Interface
J8	RS232 Port
J9	Terminal Block (see Figure 5)
J10	Not used
J11	Handset V.C. Interface
J12	ISP-DIP/Debug UART

Table 1 - Connector Functions

8.4. Network Connectivity, and Data Rate

When you plug in the Ethernet cable or power supply:

- The square, green **Link** light above the Ethernet port indicates that the network connection has been established (see Figure 8). The Link light changes color to confirm the auto-negotiated baud rate:
 - This light is yellow at 10 Mbps.
 - It is orange at 100 Mbps.

8.4.1. Verify Network Activity

The square, yellow **Activity** light blinks when there is network activity.

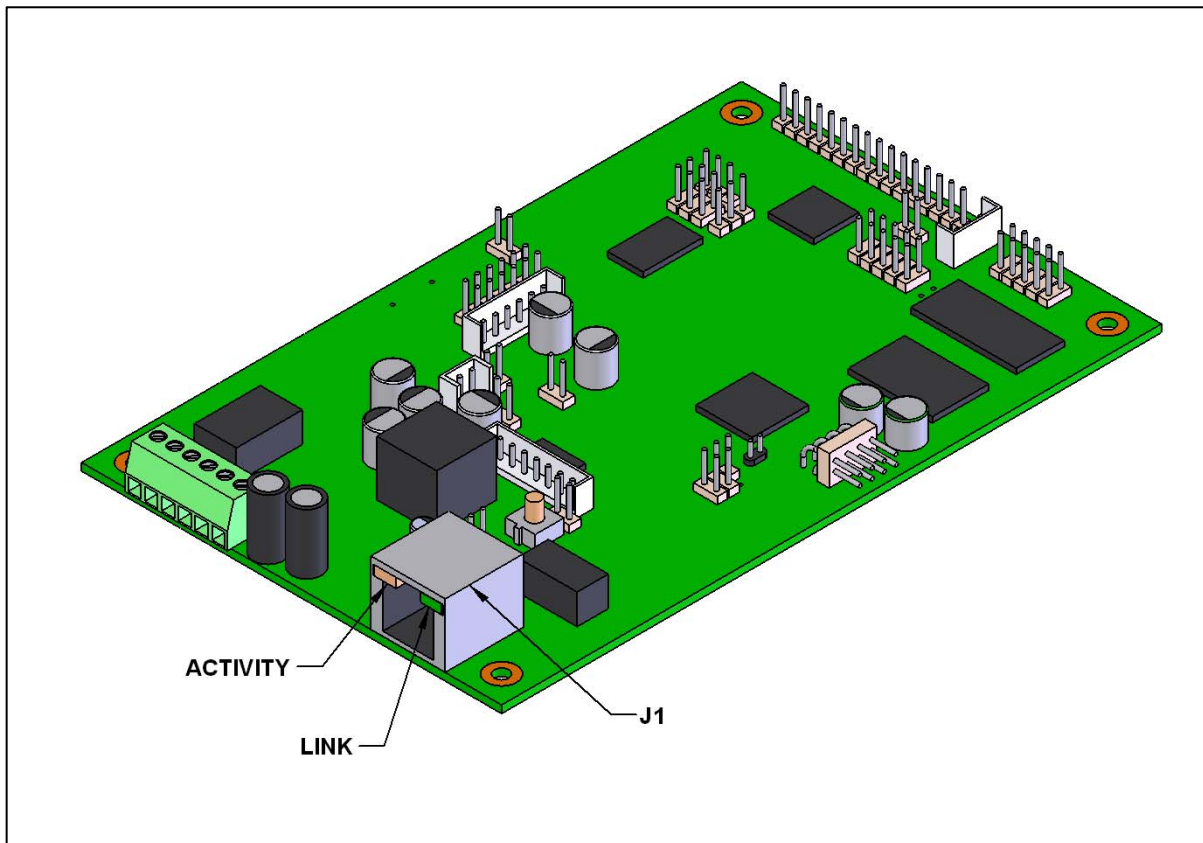


Figure 8 - Network Activity

8.5. RESET Switch

When the Telephone is operational and linked to the network use the Reset Test Function Management (**RESET**) switch (Figure 9), on the Telephone board to announce, the Telephone's IP Address, and test that the audio is working (see Section 8.5.1). The message will come through the handset receiver.

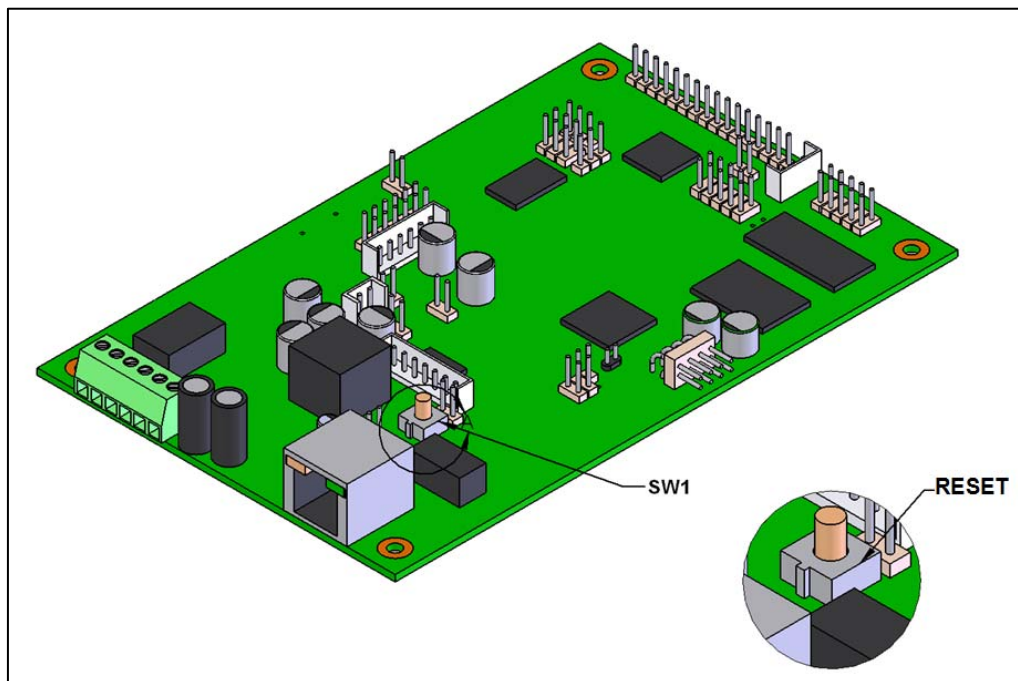


Figure 9 - RESET Switch

8.5.1. Announcing the IP Address

To announce a telephone's current IP address:

1. Press and release the RESET switch (SW1). Do not hold more than five seconds.

Note The telephone will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).

Note Pressing and holding the RESET switch for longer than five seconds will restore the telephone to the factory default settings.

8.5.2. Restore the Factory Default Settings

When troubleshooting configuration problems, it is sometimes convenient to restore the device to a known state.

Note: Each Telephone is delivered with factory set default values.

To set the factory default settings:


1. Press and hold the **RESET** switch (SW1) for more than five seconds.
2. The telephone announces that it is restoring the factory default settings.

Note The telephone will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).

8.6. Adjust the Volume

You can adjust the volume through the Device Configuration Page.

9. Product Specifications

Electrical Performance	
RINGER OUTPUT	>80 dB
MICROPHONE	NOISE REDUCING ELECTRET
RECEIVER	HEARING AID COMPATIBLE
Category	Specification
ETHERNET I/F	10/100 MBPS
PROTOCOL	SIP RFC 3261 COMPATIBLE
POWER INPUT	802.3AF COMPLIANT PoE OR 24 VOLTS AT 500mA
PAYLOAD TYPES	G711, A-LAW AND μ -LAW
RELAY CONTACT	0.5AMP 30VDC
Environmental	
WEATHER AND CORROSION RESISTANT	ENCLOSURE NEMA 3R
TEMPERATURE	-22° TO +140° F (-30° TO +60° C)
HUMIDITY	0 TO 100% RH
Mechanical	
HOOK SWITCH (CRADLE SWITCH) LIFE	>1 000 000 OPERATIONS
BODY CONSTRUCTION	GE VALOX 357 [®] ENGINEERING POLYMER
FACEPLATE	STEEL, CORROSION PROTECTED & POWDER COATED
DIMENSIONS (H X W x D)	12 x 9.6 x 3.9 INCHES (305 x 245 x 99 mm)
NET WEIGHT INCLUDING MOUNTING PLATE	7 LBS (3.2 kg)
HANDSET MATERIAL	HIGH IMPACT ABS
STANDARD MOUNTING	VERTICAL WALL
WIRING ACCESS	7/8 INCH OPENING FOR OWNER SUPPLIED FITTING
HARDWARE MATERIAL	STAINLESS STEEL
COMPLIANCE	
UL/CUL	Class I, Division 2, Groups A,B,C and D
FCC	Part 15, Class A
IC	ICES-003 Class A CISPR 22: 2008
IEC	61000-6-2: 2005
	
WEATHERPROOF ENCLOSURE	TYPE 3R

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

10. Field Repairs

Field repairs may only be carried out by qualified technicians using OEM parts. Substitution of parts voids warranty and may pose a hazard to users of the equipment.

Disconnect the telephone IP Cable and Aux Power if necessary.

Carefully remove the front cover assembly and separate from the housing by disconnecting the harness plugs. NOTE that the handset and all electronics are attached to the front plate.

Perform the necessary repairs or adjustments.

Carefully replace the front plate and install all screws. Do not over tighten the cover screws. There is a flexible gasket between the cover and the body; excessive tightening of the screws deforms the gasket and reduces the weather resistance of the set.

Handset Replacement

Refer to the instruction sheet included with the replacement handset.

Disconnect the handset wiring from the PCBA.

If the phone is equipped with an armored cord handset, remove the anchor screw from the armored cord lanyard.

Loosen the handset cable gland and pull out the cord.

Install the new replacement handset and tighten the gland.

Rewire the handset cord to the PCBA.

Ringer Replacement

Disconnect the ringer wiring from the terminal block on the PCBA.

Remove the screws that hold the ringer to the housing.

Install the new ringer and gasket.

Reconnect the ringer wiring to the terminal block.

Main Circuit Board Replacement

Label any wiring attached to the circuit board. Disconnect wiring and ribbon cable.

Remove the two screws holding the circuit board in place. Carefully remove the board.

Install the new board and reconnect the wiring.

If the configuration had been changed from the factory default settings reprogram the telephone.

Test by making and receiving calls from another telephone.

See: 11 Replacement Parts

11. Replacement Parts	
Part No.	Description
P000126	Yellow Housing
P001457	Rubber Feet
P001488	Spring
P001705	Handset Cradle Top
P001706	Hinge Pin
P002557	Gasket For Faceplate
P002606	Gasket For Access Plate
P002902	Handset Cradle Bottom
P002988	Sub Assembly - Velcro Door
P002995	Retaining Ring
P003045	Backplate For Housing
P004371	Handset Retainer Clips
P005765	Faceplate - WRT-V-H Telephone
P005778	Faceplate WRR-V-H Ringdown
P005784	Access Plate
P005837	Reed Switch
P007228	Handset-4' Curly Cord C/W VC, Tx & Rx (Cn)
P007230	Handset- 22" Armored Cord - VC, Tx & Rx (Cn)
P007319	Ringer- Floyd Bell - V-H
P007321	Connector - Crimp Pin For Mating EH Connectors
P007323	Connector - 3 Pin EH Mating Connector
P007376	Sub Assembly - WRR V-H Faceplate
P007395	PCBA - V-H/Tel/Handset (V-H Tel)
P007435	Connector - 6 Conductor, EH Mating
P007445	Sub Assembly - WRT-10 V-H Faceplate
P007470	Sub Assembly - WRT-30 and WRT-40 V-H Faceplate
P007472	Sub Assembly- Metal Keypad V-H C/W PCB & Cable
P007446	Plate - V-H PWBA Mounting Adaptor - Ringdown
P007477	Plate - V-H PWBA Mounting Adaptor - Telephone

12. Cleaning Tips for Guardian Telephones

Guardian Telephones may occasionally need to be cleaned to maintain appearance. Generally, wiping the surface with a clean, water dampened cloth will remove most films or residues. If the soiling is too stubborn for plain water, a mild detergent solution may be used. Be sure to wipe away any detergent residue with a plain water dampened cloth. The Telephone may be cleaned with any general-purpose household glass and surface type cleaner. Do not spray the telephone directly! Spray the cleaner on a soft cloth then wipe the surface. Pre-treated cloths, like those used for eyeglasses or cameras, may be used to clean the Telephone. Premoistened towelettes may also be used, however, avoid those containing lanolin or aloe as they will leave a slippery residue. The handset and surface of the telephone may be cleaned with disinfectants used for general cleaning in a medical environment. Isopropyl alcohol may be used applied with a cloth. Avoid using alcohol on silicon based keypads, since doing so may significantly degrade legibility.

- Do not use furniture polishes, waxes or plasticizer-based cleaner (Armor All etc.)
- Do not use lanolin, aloe, glycerin or other skin care type products.
- Do not apply any solvent such as acetone, mineral spirits etc.
- Do not directly spray or immerse the handset.

13. Warranty

Guardian Telecom warrants your product to be free of defects in material and workmanship for a period of one year. Guardian Telecom will repair or replace any defective unit that is under warranty. This warranty is null and void if any non-authorized modifications have been made to this product, or if it has been subjected to misuse, neglect, or accident. This warranty covers bench repairs only; such repairs must be made at Guardian Telecom or an authorized service depot. Guardian Telecom is not responsible for costs incurred for on-site service calls, freight, or brokerage.

A return authorization must be obtained prior to warranty claims or repairs.

14. Disclaimer

The products covered by this manual are designed for use in Industrial Environments and/or Hazardous Locations. Due to the range of possible applications for these instruments the manufacturer will not be responsible for damages or losses of any kind suffered as a result of the use of this product, including consequential damages.

15. Warning

This device may be opened and reassembled by qualified personnel only, for the purposes of installing the product, making adjustments and replacing components, following the instructions in the product manual.

High voltages may be present in this product when wiring is connected.

16. Service Telephone Number

1-800-363-8010

Guardian Telecom provides a customer service telephone number which is toll-free within North America. If you need assistance when installing or operating this product, please call the toll-free telephone number between regular business hours (8:00AM-5:00PM), Mountain Standard Time. If you are calling outside of regular business hours, please leave a detailed message, and a member of Guardian Telecom's Service Department will return your call as soon as possible. If your product requires service, Guardian personnel will supply you with an RMA (return materials authorization) number over the telephone or through our web site product return page. This number must be included with your return address and the name of the person to contact.

Guardian Telecom Inc.
Toll-free 1-800-363-8010
Phone (403) 258-3100
Fax. (403) 253-4967
www.guardiantelecom.com

17. Feedback

Guardian Telecom continually strives to make reliable, durable, and easy to use products. If you, as an installer or user of our equipment, have any suggestions for improvements to this or any of our products or documents, including this manual, we would appreciate hearing from you.

18. Guardian Product Return

Guardian products have been quality tested and are in full working order when shipped from the factory, given the rugged nature of these products shipping is not expected to damage a unit. In the unlikely event of a malfunction, Guardian follows the three step procedure below.

Step I - On-Site Correction

The most common source of difficulties with a new product is improper installation in one of two ways: incorrect wiring connections or connection to an incorrect power source.

Product wiring needs to be properly connected to the on-site wiring. Correct wiring instructions are shown in the user manuals included with the product or on-line.

VoIP telephones must receive power either from the Ethernet (POE) or from an external source. If a VoIP telephone fails to function refer to the Question & Answer section in the Setup and Configuration manual P007402. If the solution is not found in the Q & A section contact Guardian Tech Support online under Products\VoIP Technical Support at www.guardiantelecom.com or at 1-800-363 8010.

Step II - Return Materials Authorization (RMA)

When a product has been installed following user manual instructions, and the unit fails to operate, the user must contact Guardian Telecom to obtain authorization to return the product. This can be done by completing a RMA form online at www.guardiantelecom.com, or by calling the service telephone number given in this manual.

After providing information on the product, the owner and the nature of the problem, Guardian will issue a RMA number, to be shown on documentation returned with the product.

In addition to the RMA number, shipping documents should include name, address and telephone number of the owner along with contact information for the person responsible for the repair and/or the user who identified the malfunction.

(Where a product is being returned for repair from outside of Canada, customs documentation must show the product's serial number, date of export [date of purchase], and a notation that the equipment is: "Canadian goods returning.")

Step III - Factory Authorized Service

Once received, each product is carefully inspected and tested. If the product is under warranty, repairs are completed and the product returned to the owner, generally within five working days of receipt by the factory.

A product that has been subjected to misuse, neglect or accident or is beyond the warranty period will be evaluated. The service department will provide the owner's representative with a repair cost estimate. Once approved, repairs are completed and the product returned, generally within five working days.

Model No.

Serial No.

Date of Purchase

THIS PAGE INTENTIONALLY LEFT BLANK



Guardian Telecom Inc.
Toll-free 1-800-363-8010
Ph. (403) 258-3100
Fax. (403) 253-4967
www.guardiantelecom.com
E-mail: sales@guardiantelecom.com
(Click to open message box)

CONNECTED. PROTECTED.

© Guardian Telecom Inc. 2015